





HIE TAKARI®




8/25 70RLM


INFINIA 411

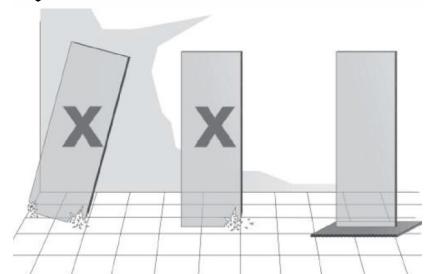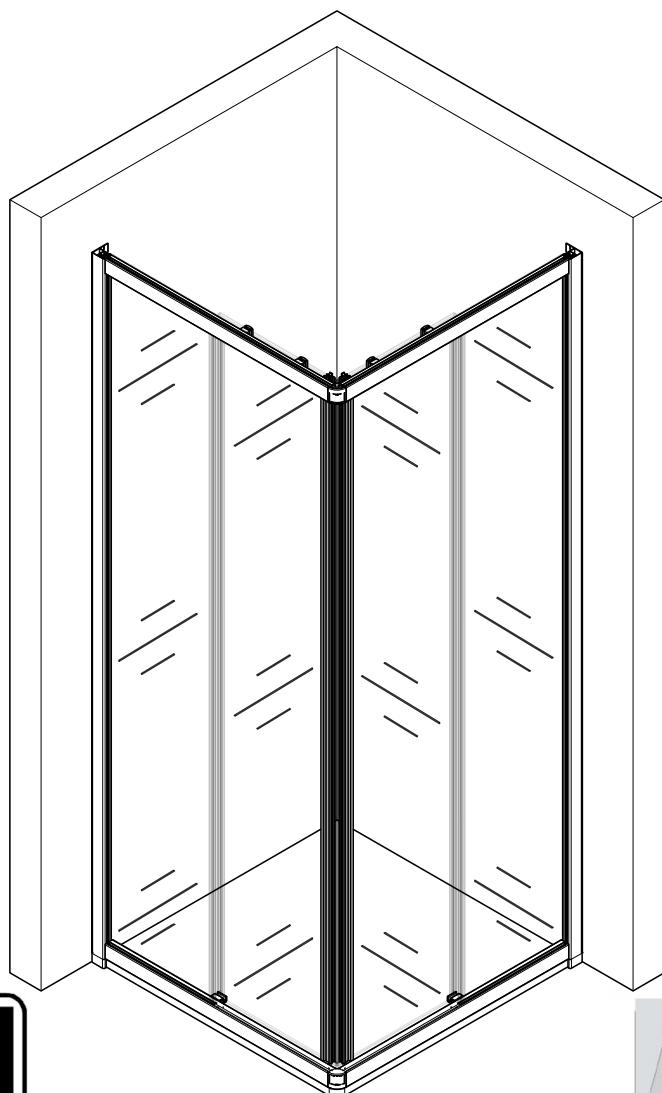


Parts

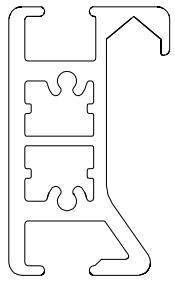


1. x2

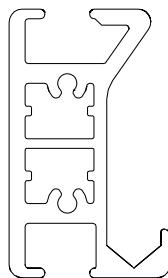

2. x2

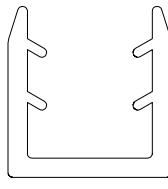

3. x4

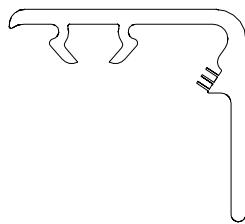


1/41 E0RLM


1/42 F0RLM




5. 3.5x39 mm

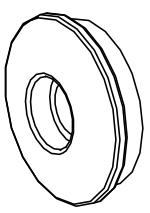


4/83 42RLM

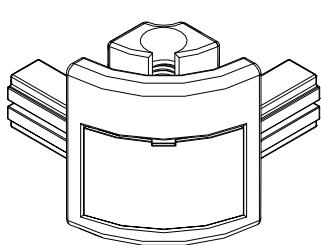


8/65 80RLM

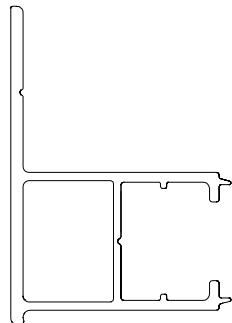


8. x2

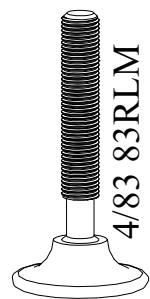


4/83 83RLM

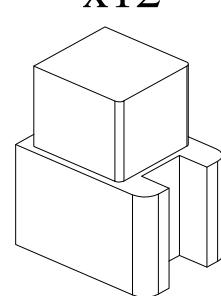


10. x2

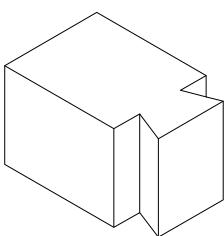

4/83 A3RLM

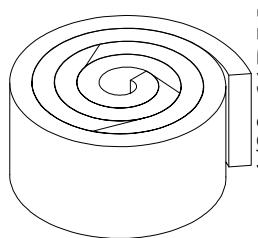


4/83 61RLM

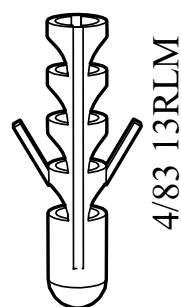

4/83 13RLM



4/83 11RLM

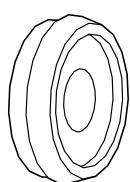


4/83 22RLM


11. x2

12. x1

13. 6x30 mm
x8

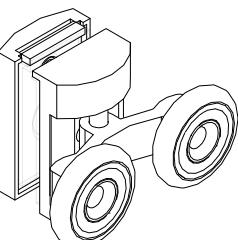

4/83 70RL1

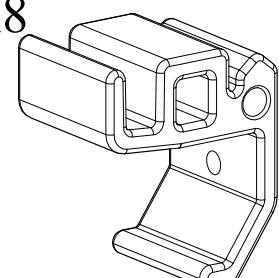


4/83 97RLM

16. x16


17. 4.2x13 mm
x14

18. x4


19. x2

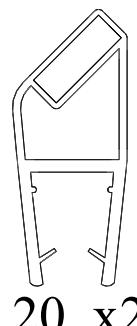


1/42 50RLM

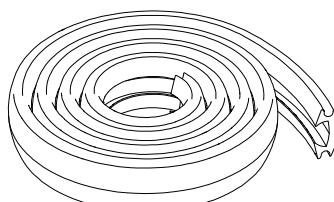


21. x1

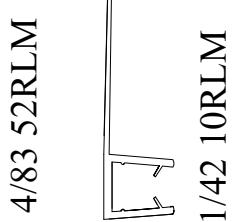


22. x4

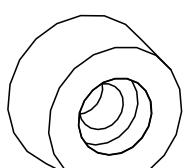

4/83 30RLM

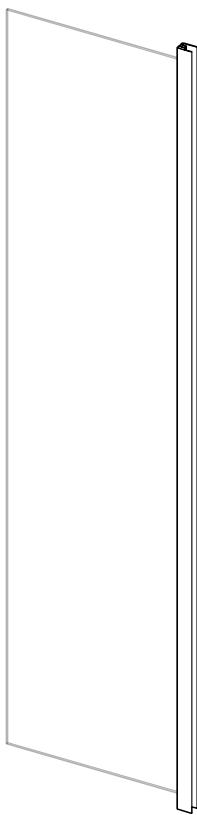


24. x2

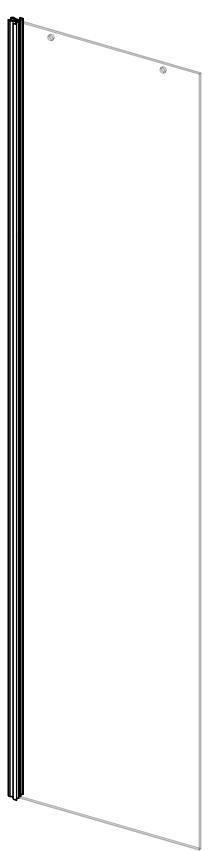


25. x2

Tools

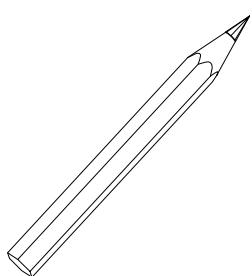


A

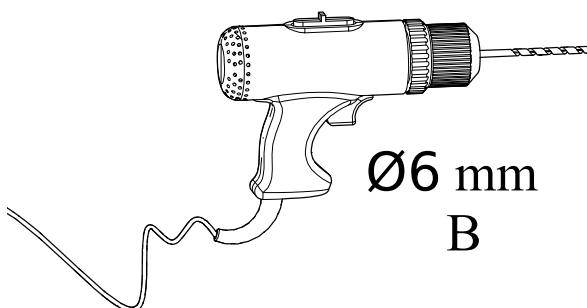

B



Silicone

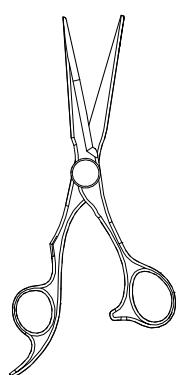

D




E




F


STEP 1/3

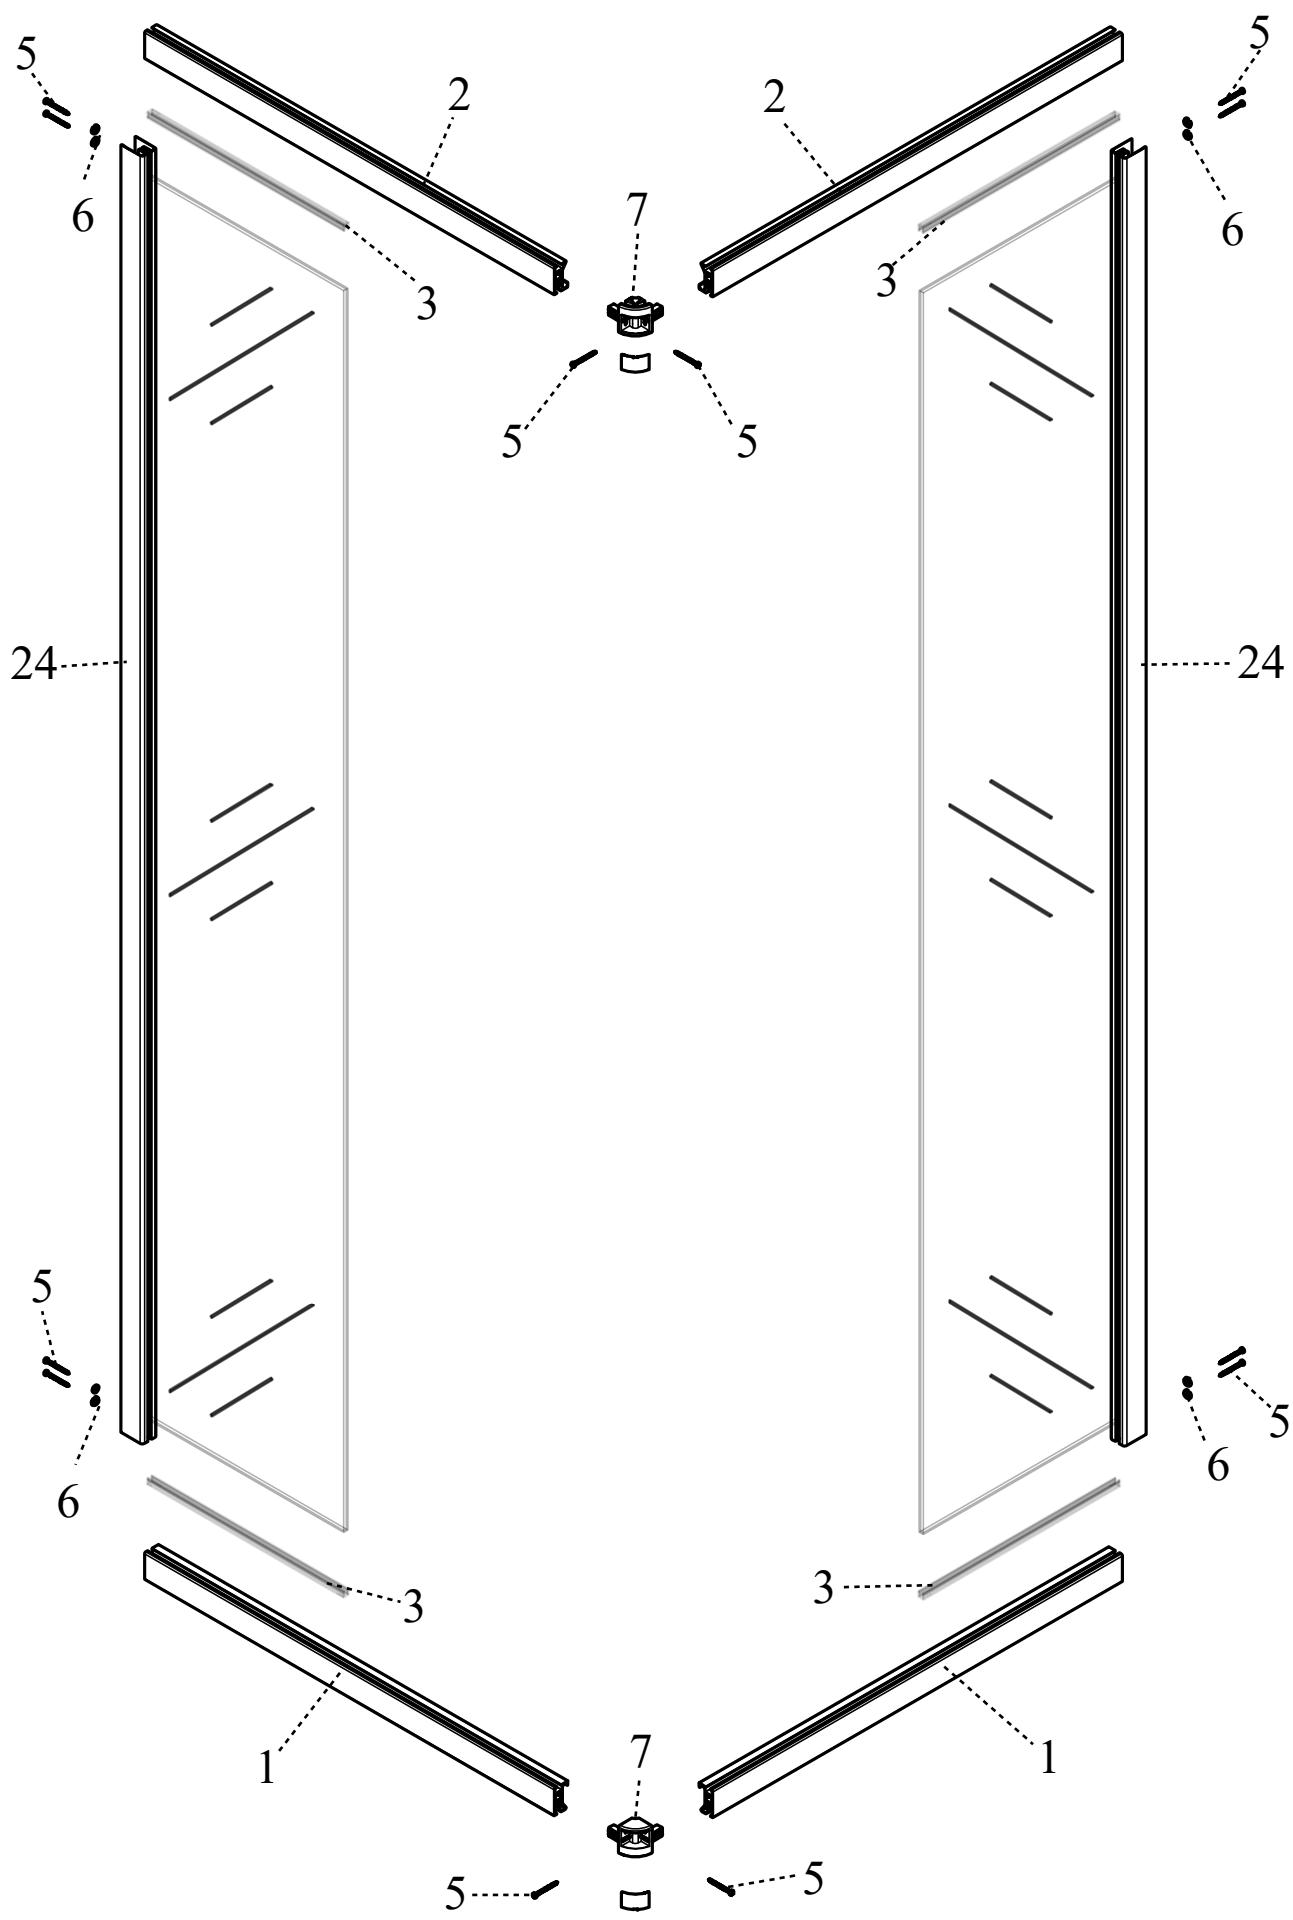


1.1

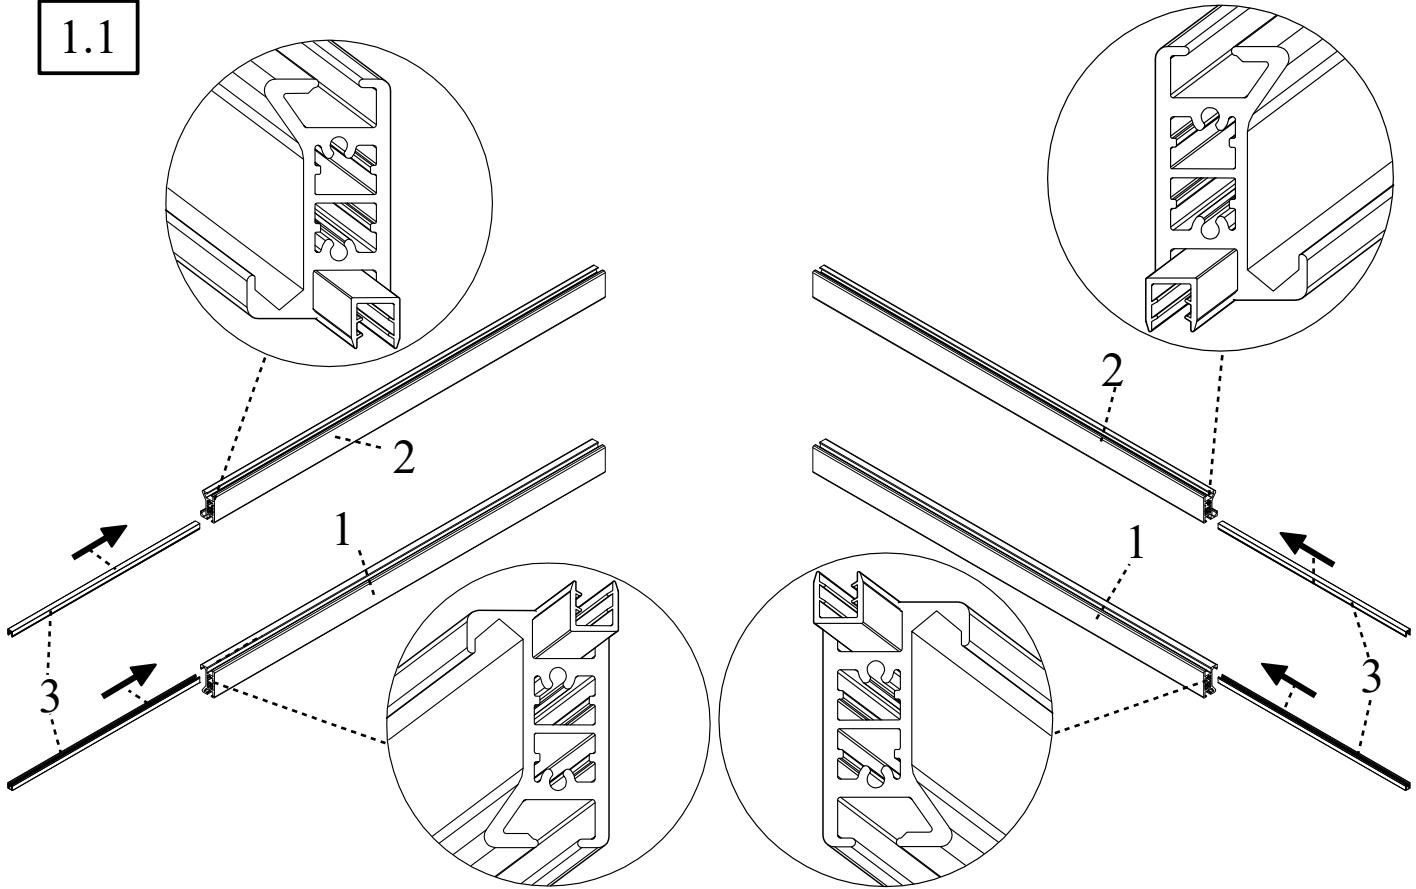


1.2

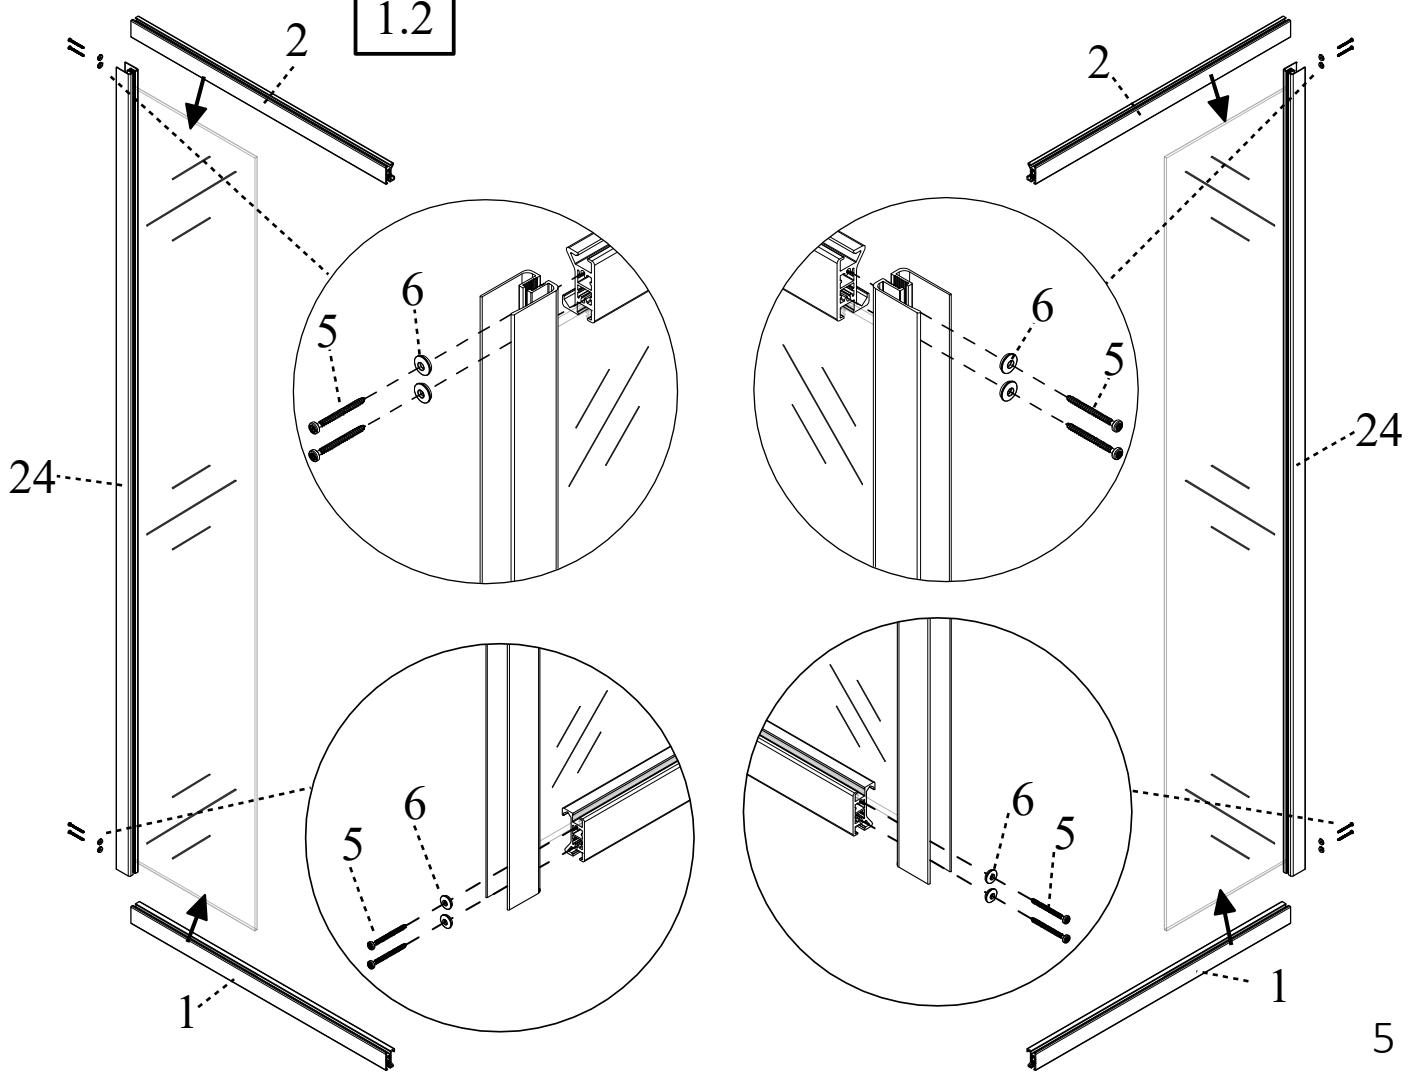


1.3

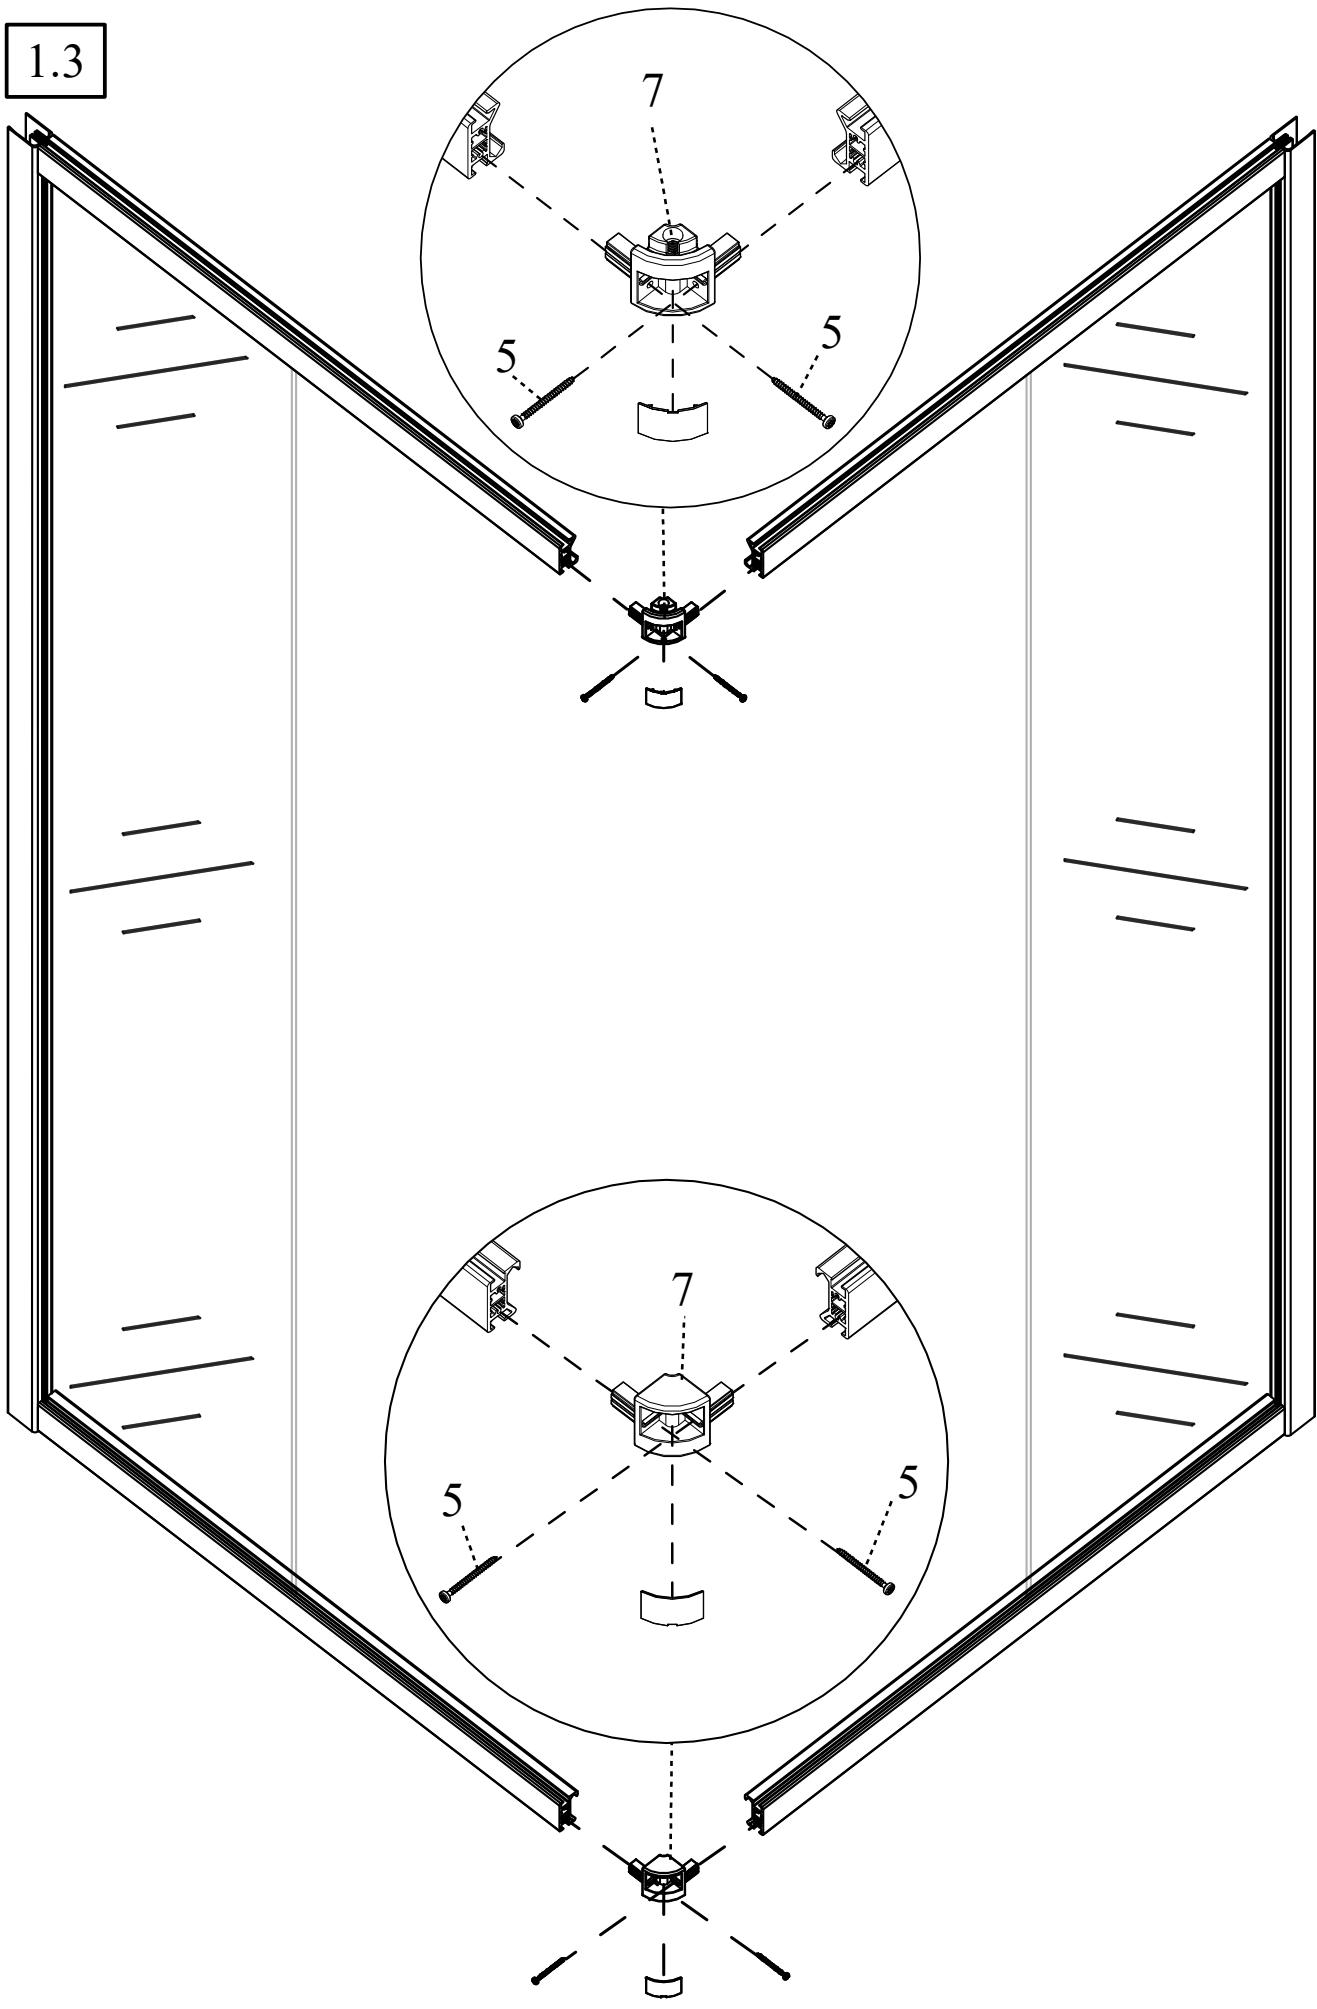


STEP 2/3

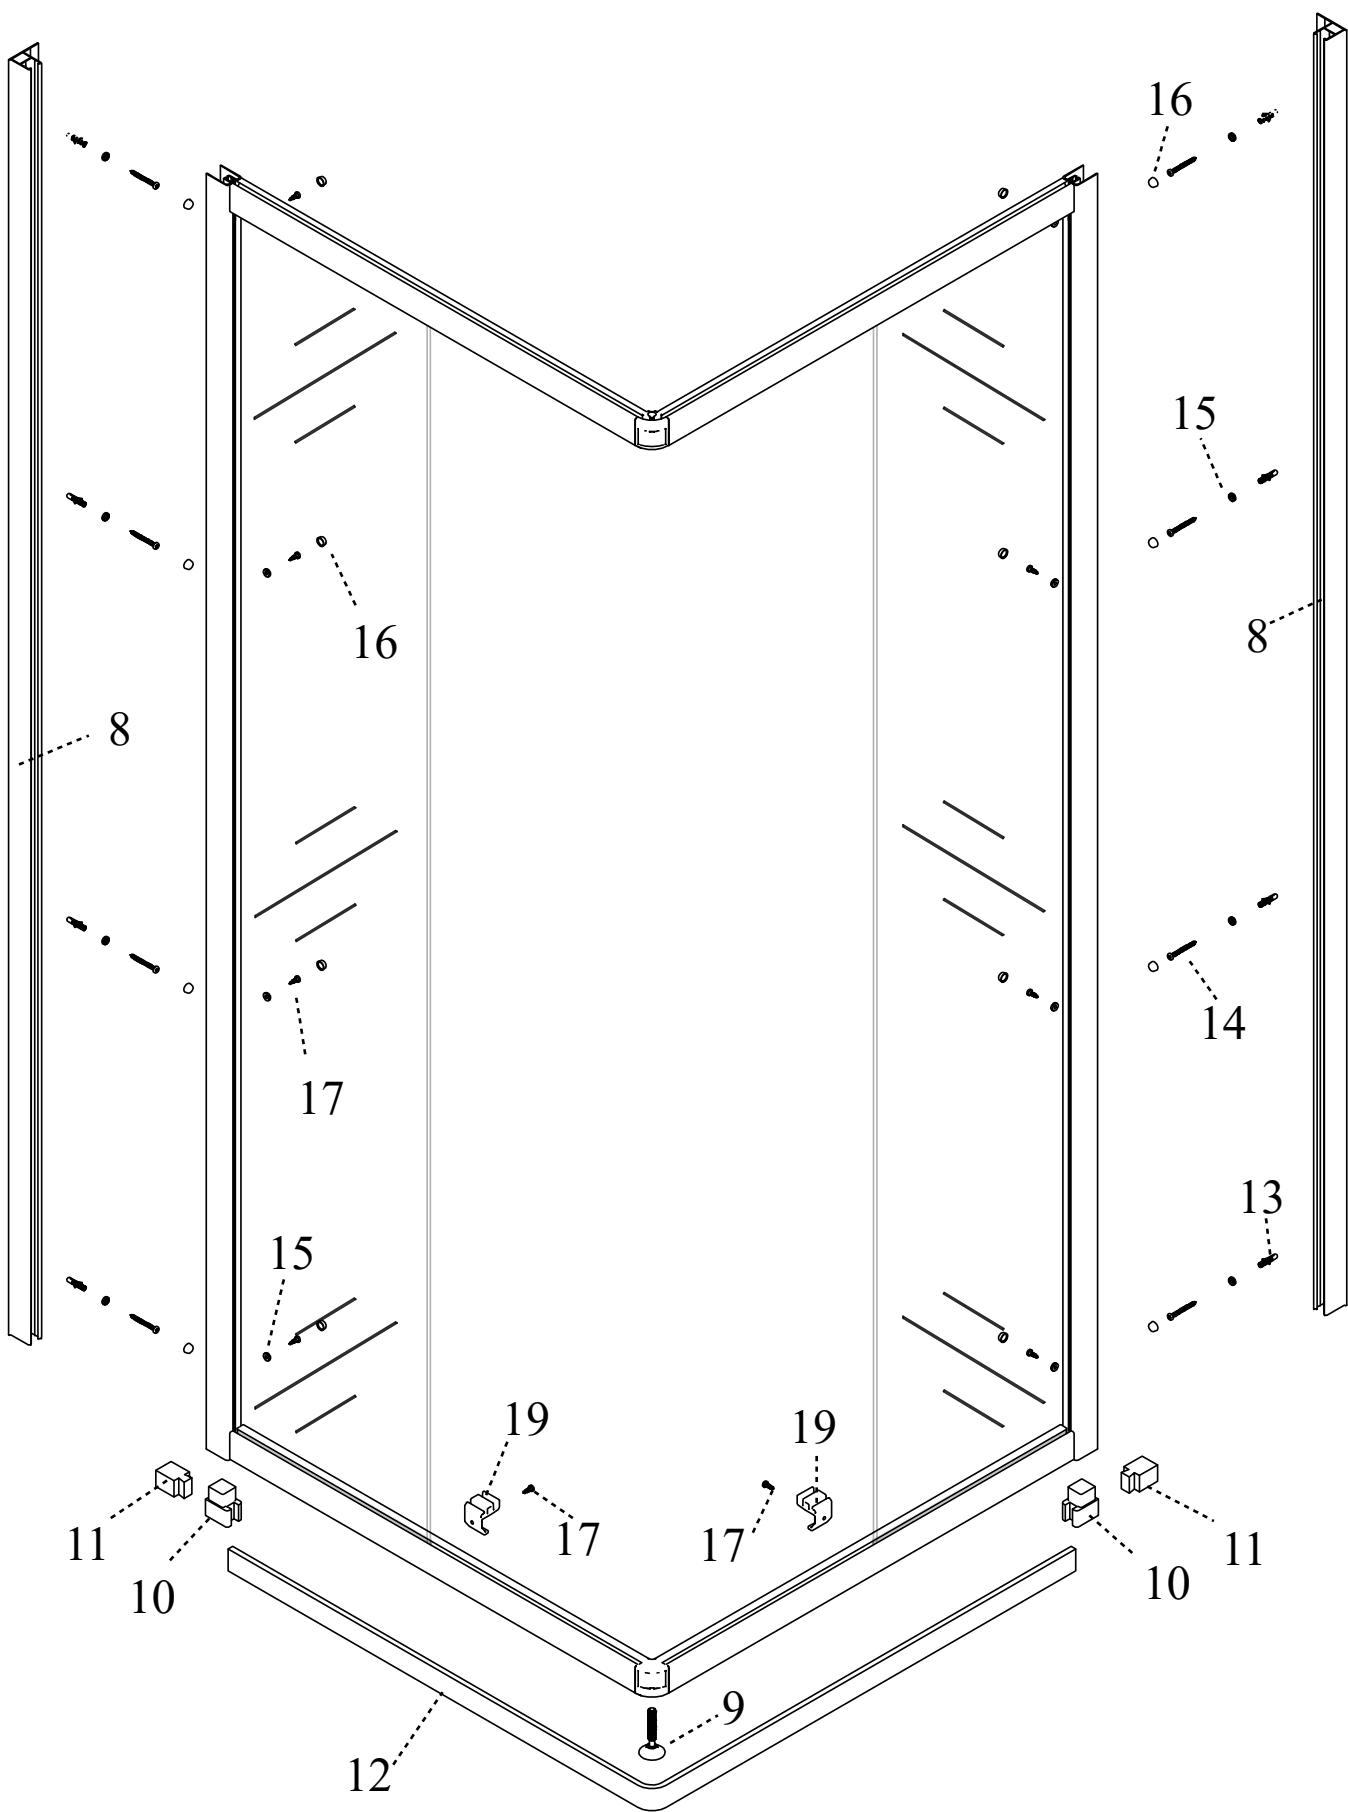


2.1

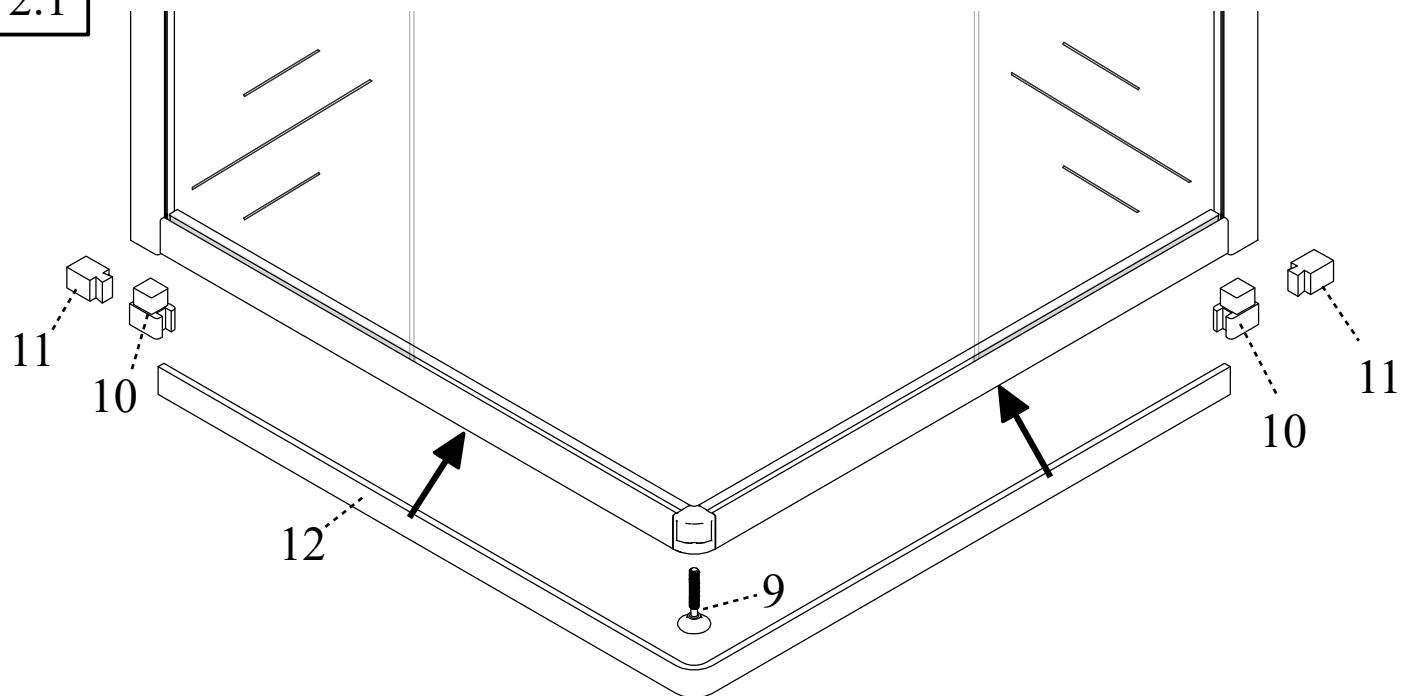


2.2

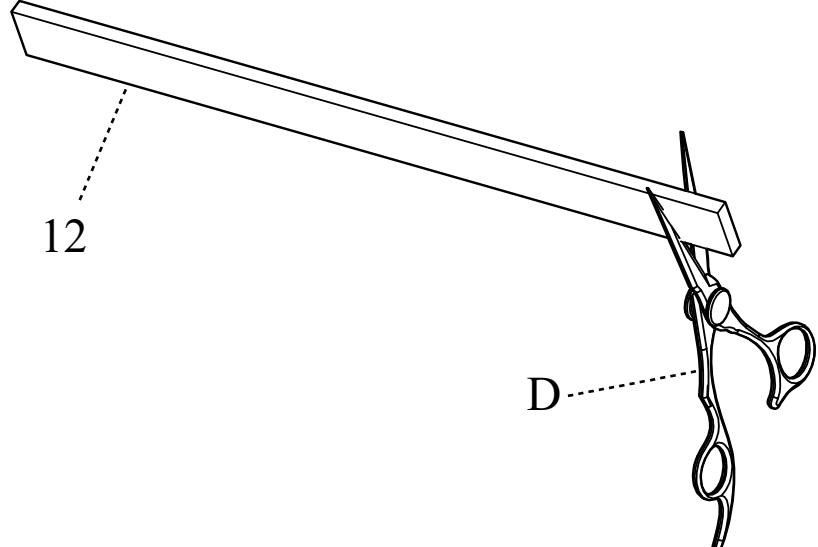


2.3

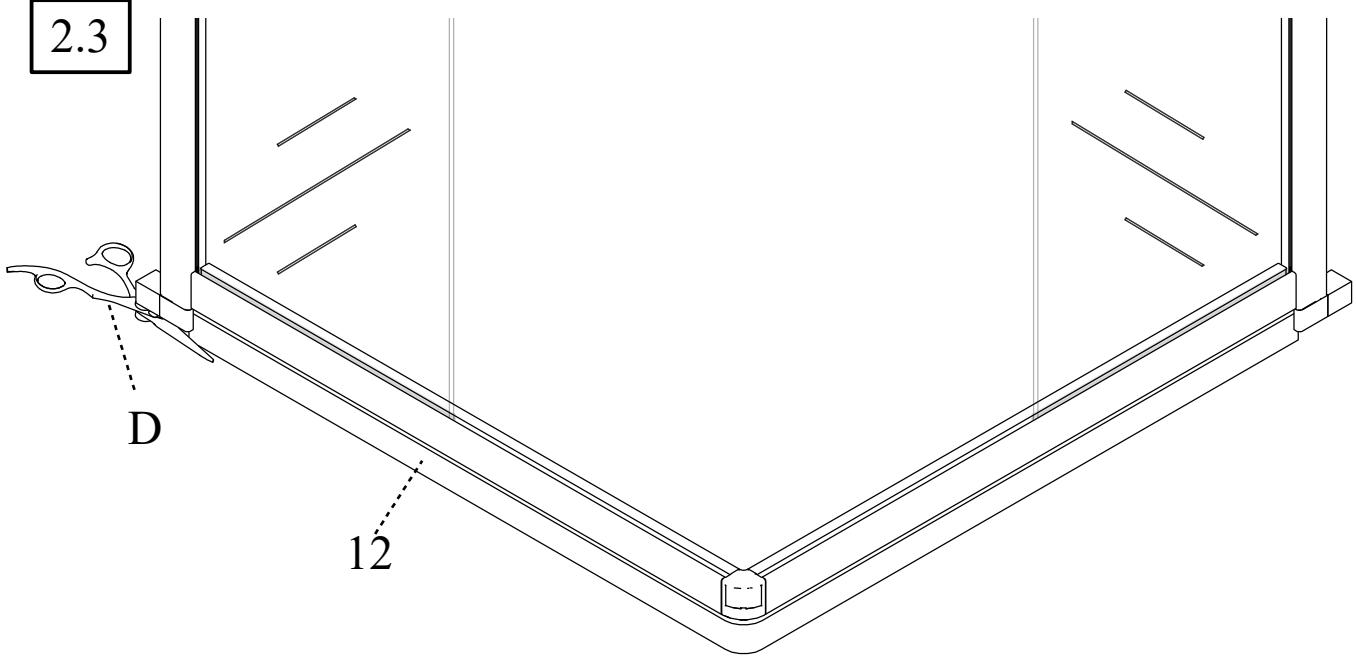



2.4

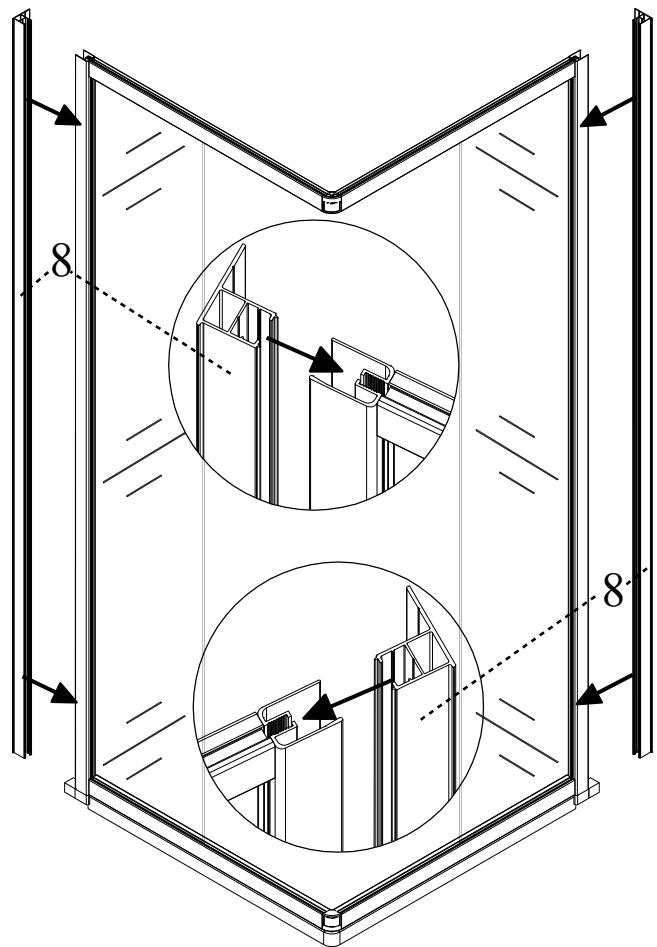



2.5

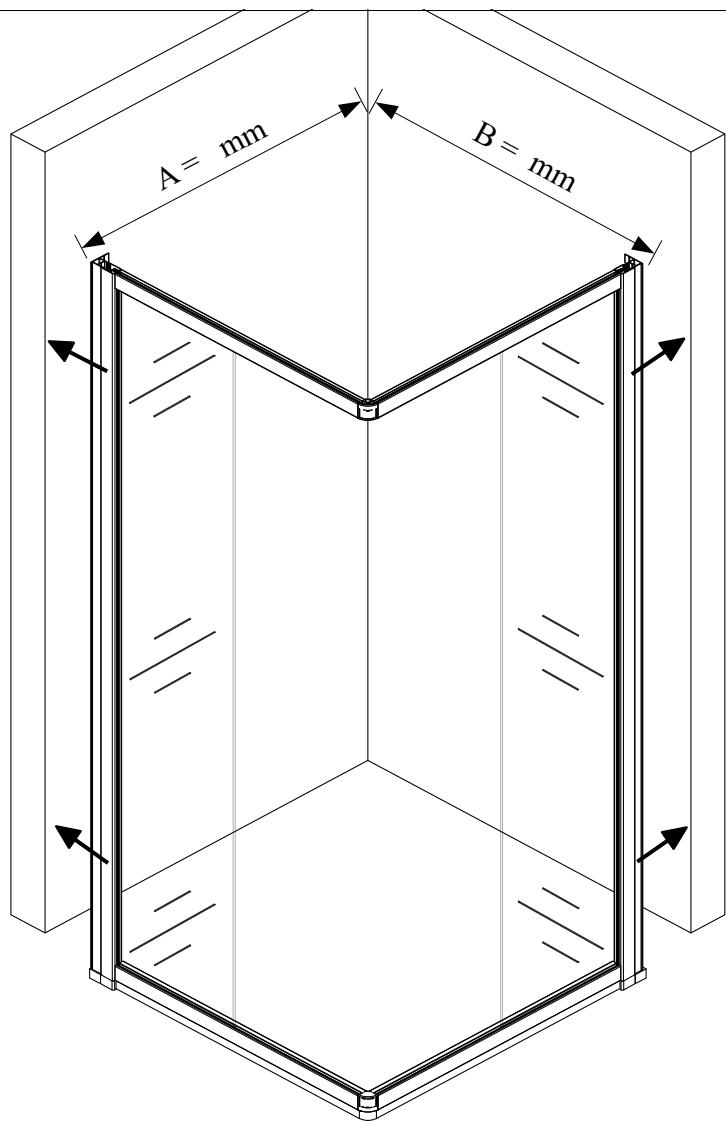


2.6

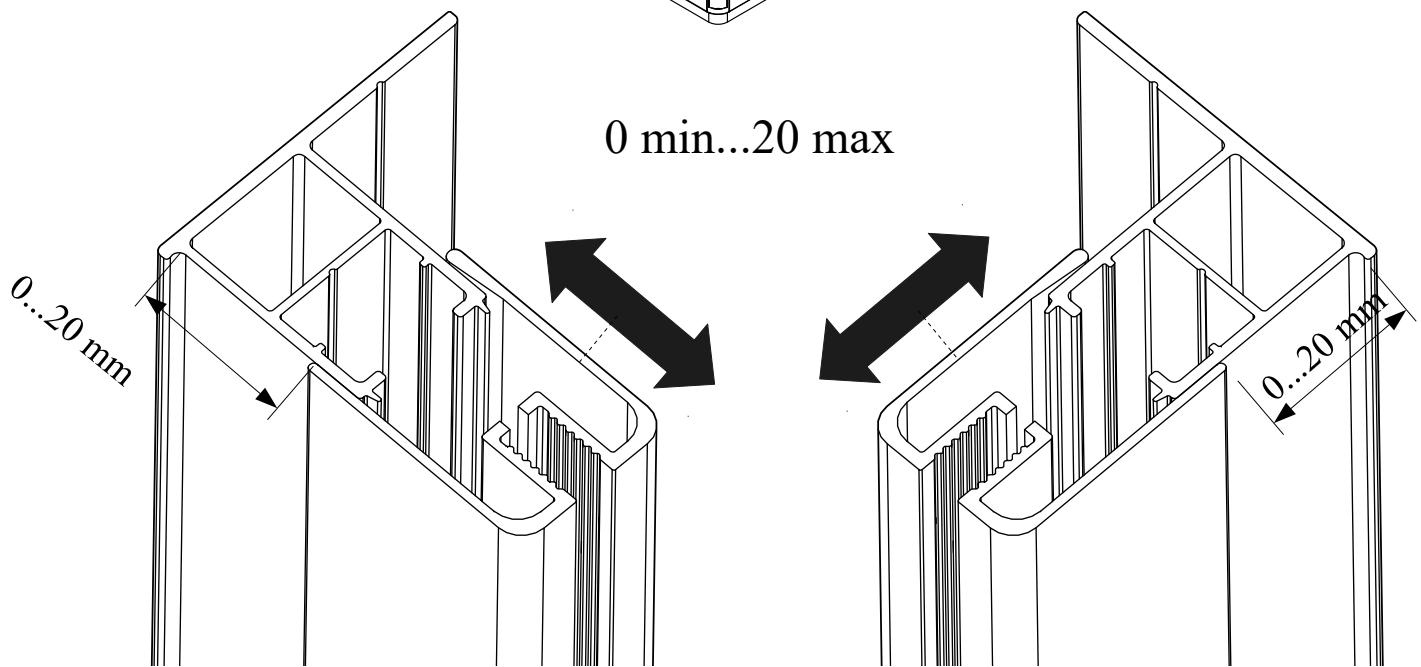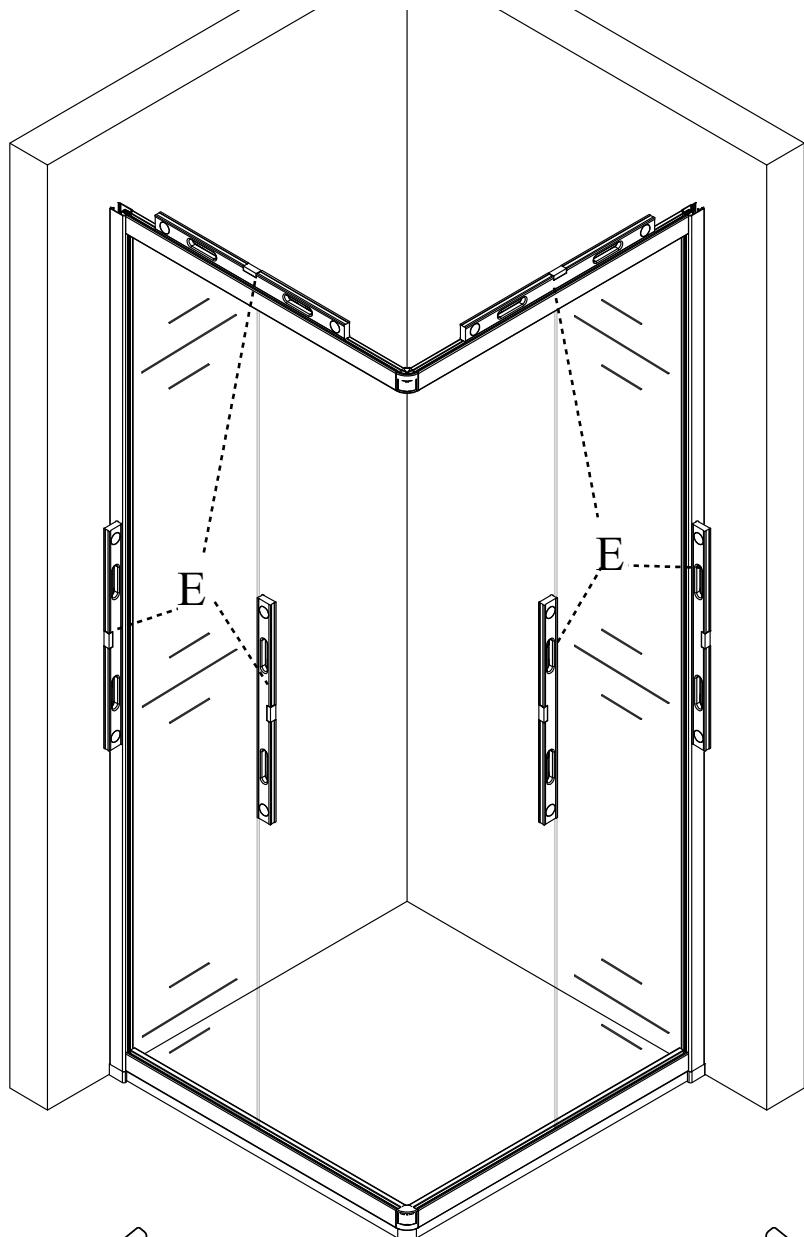

2.7

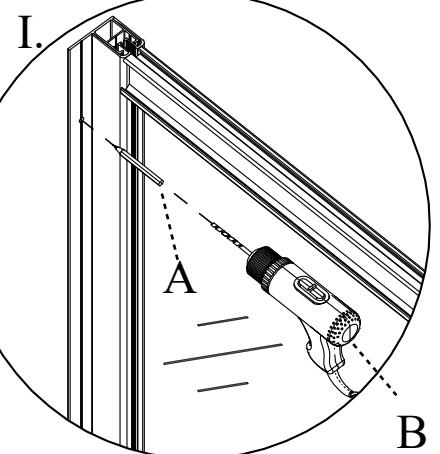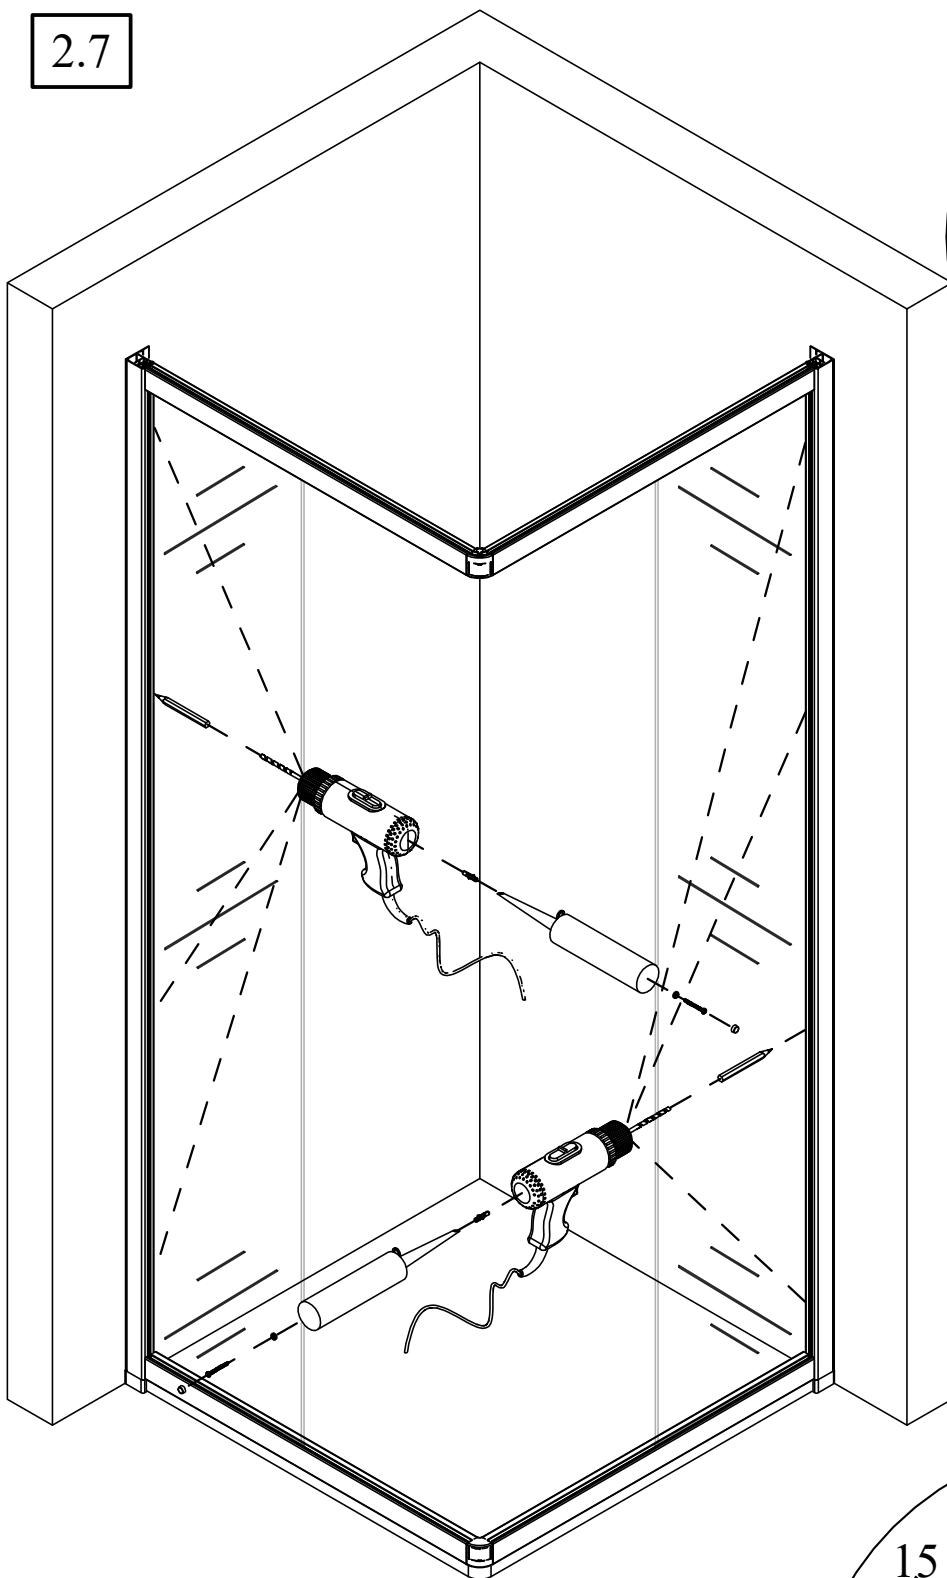


$\varnothing 6$
mm

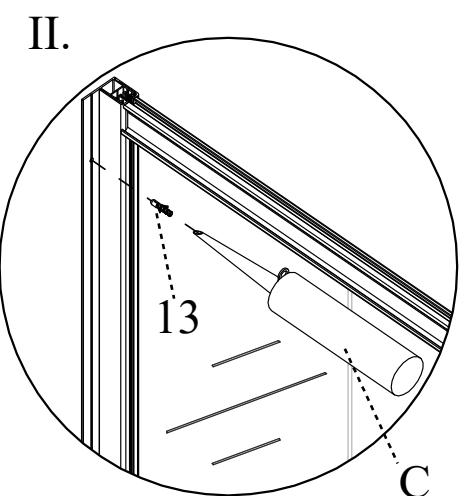


C


III.

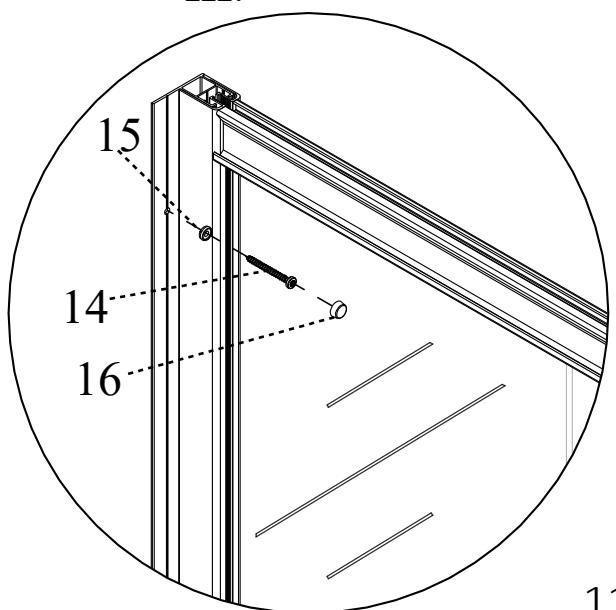


2.8

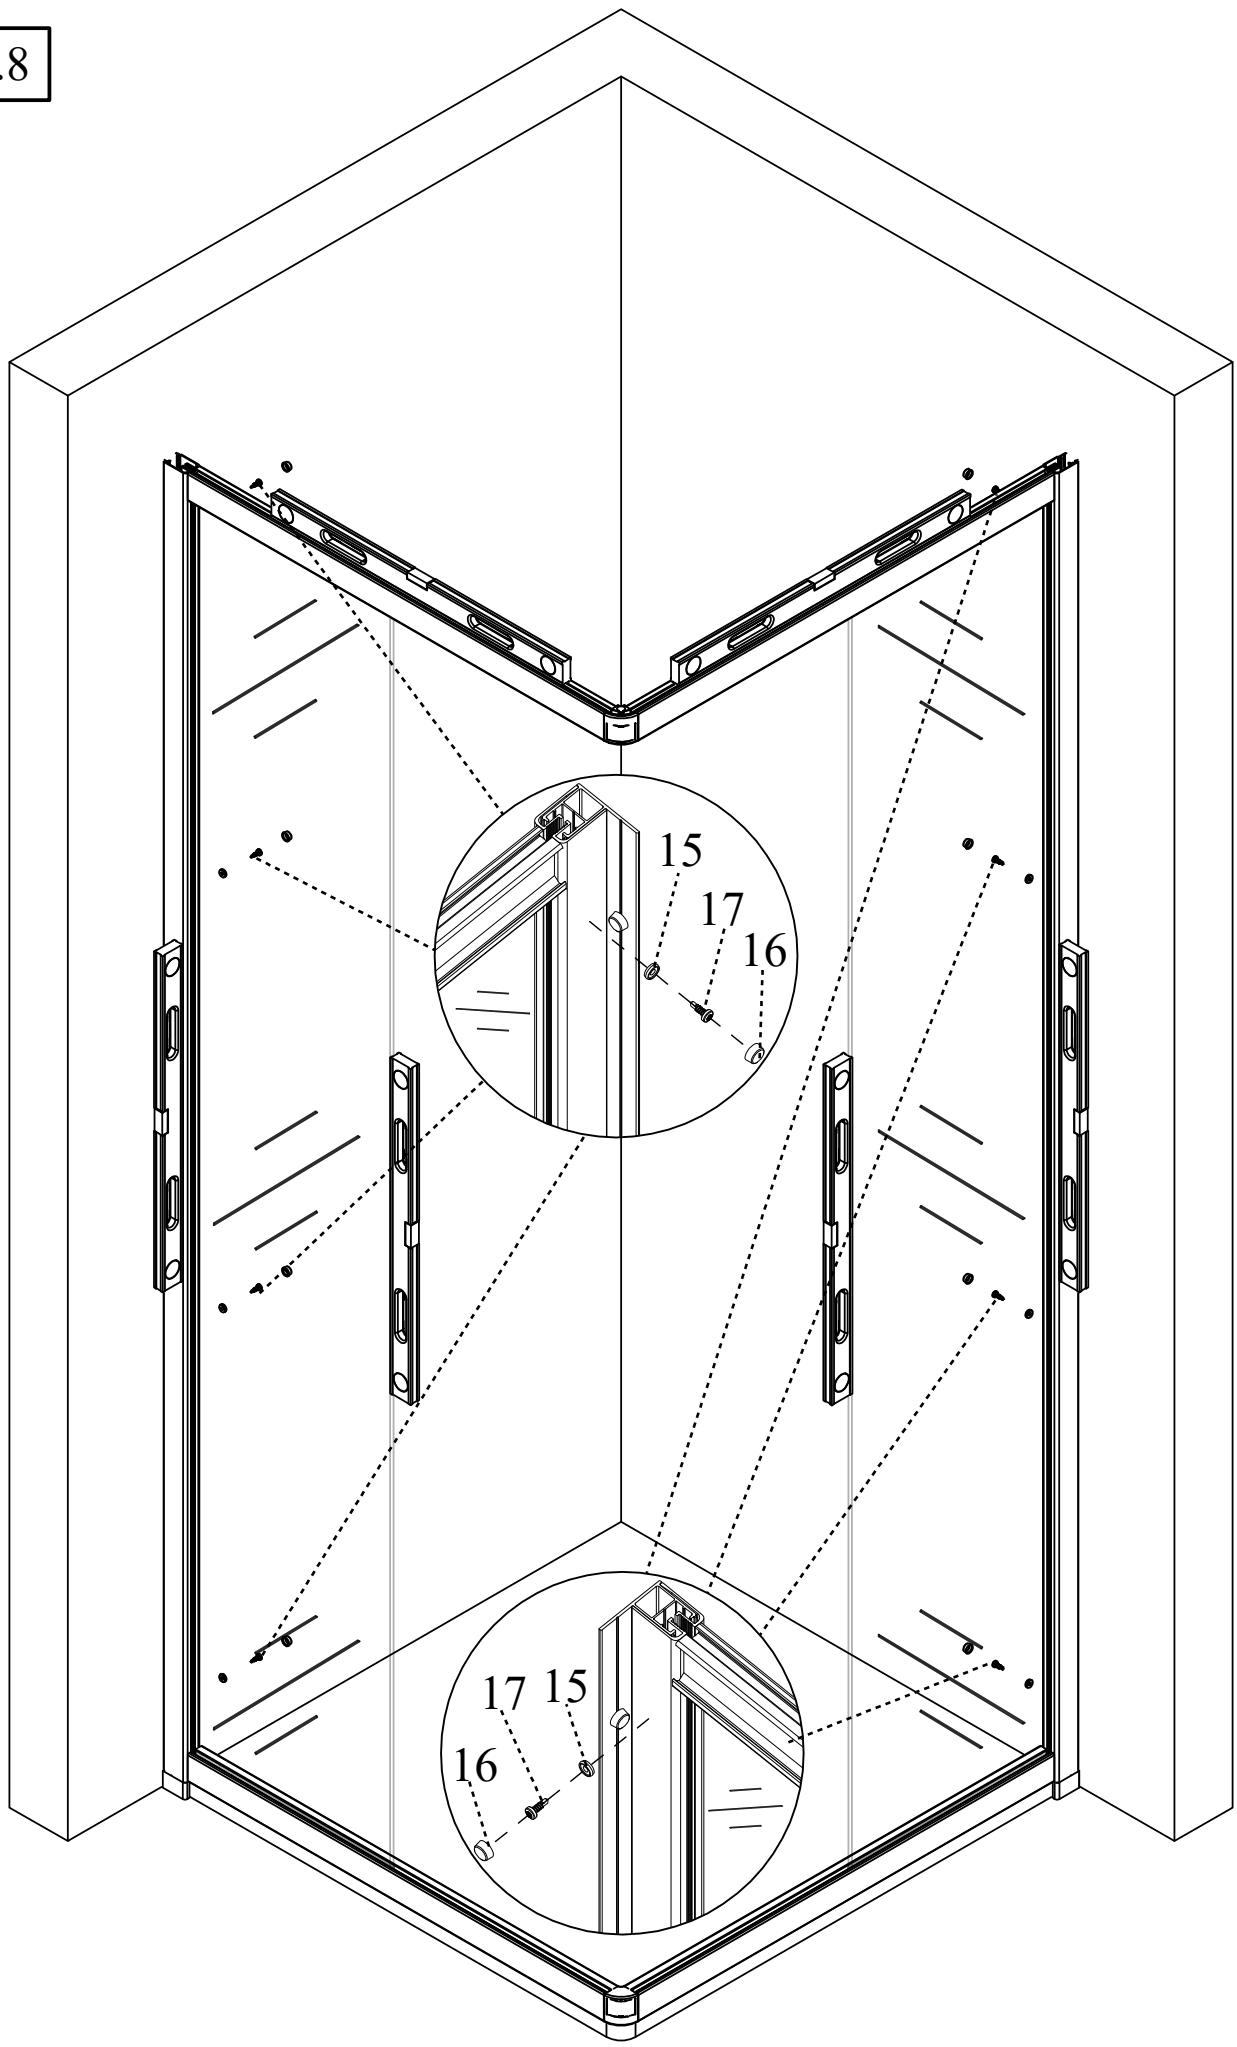


2.9

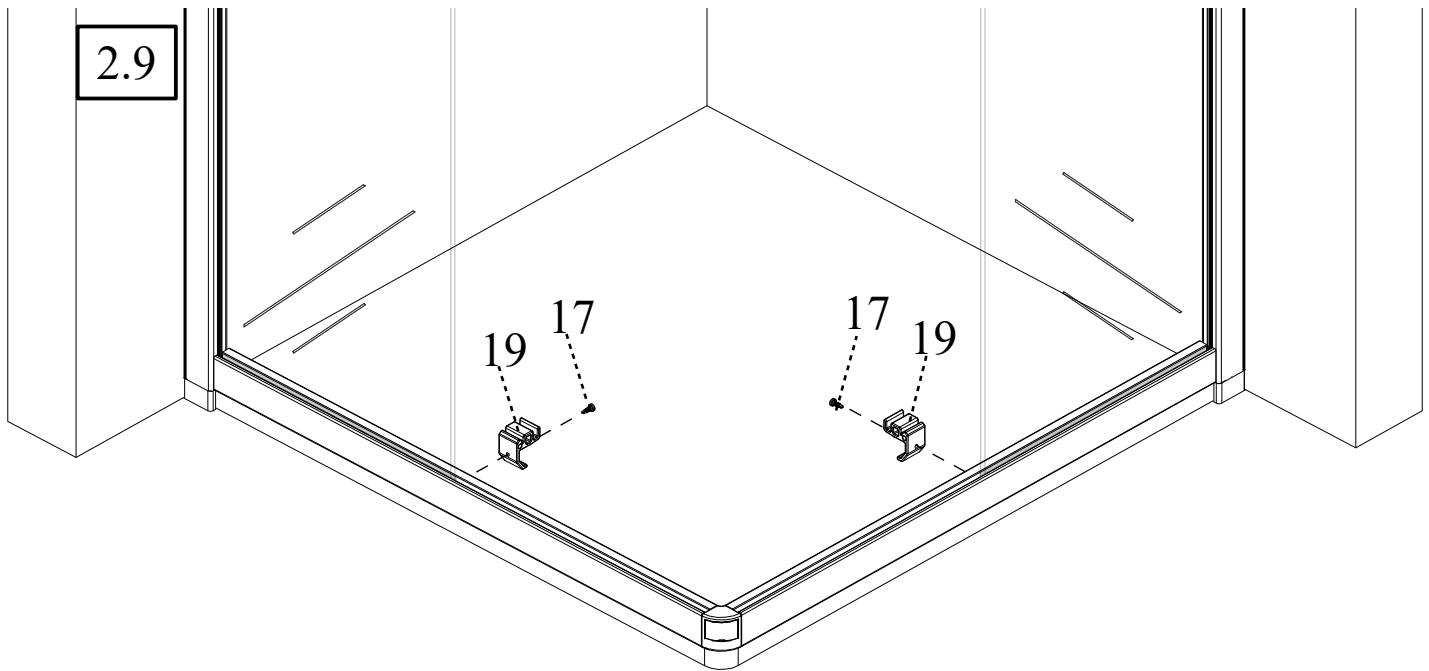






2.10

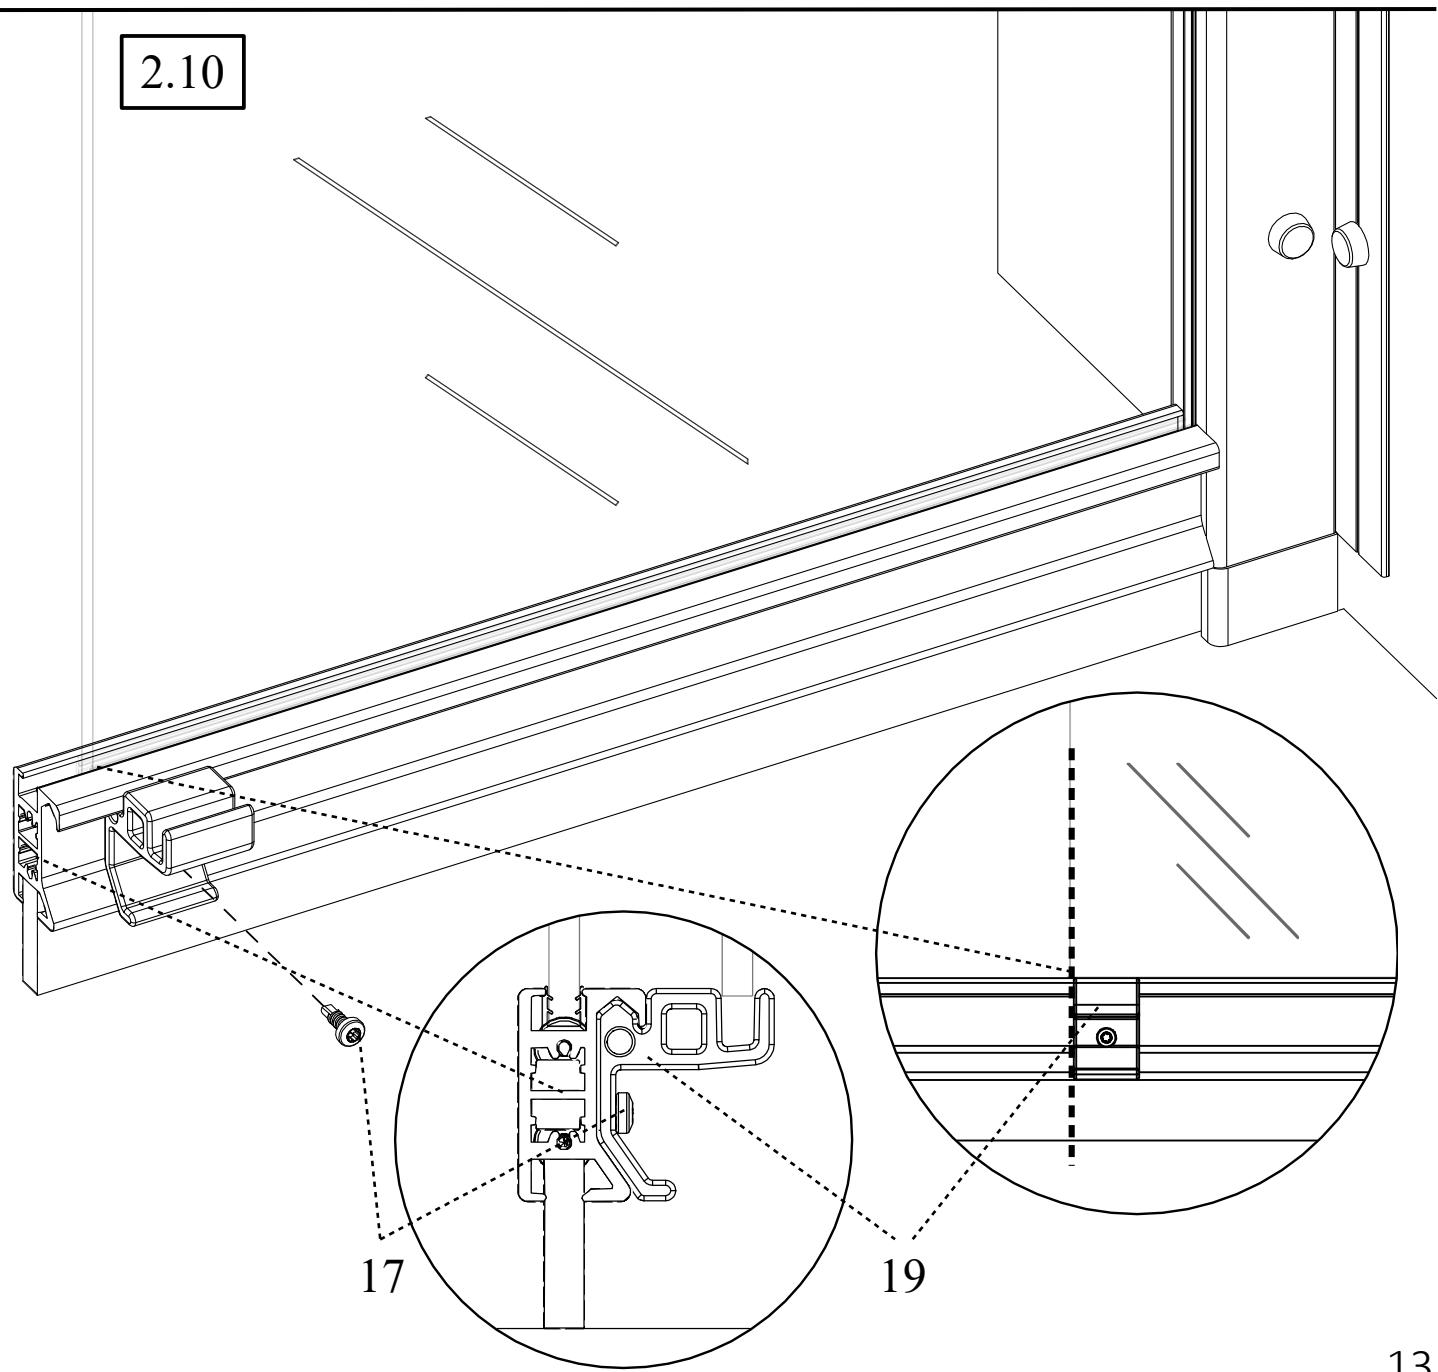




STEP 3/3

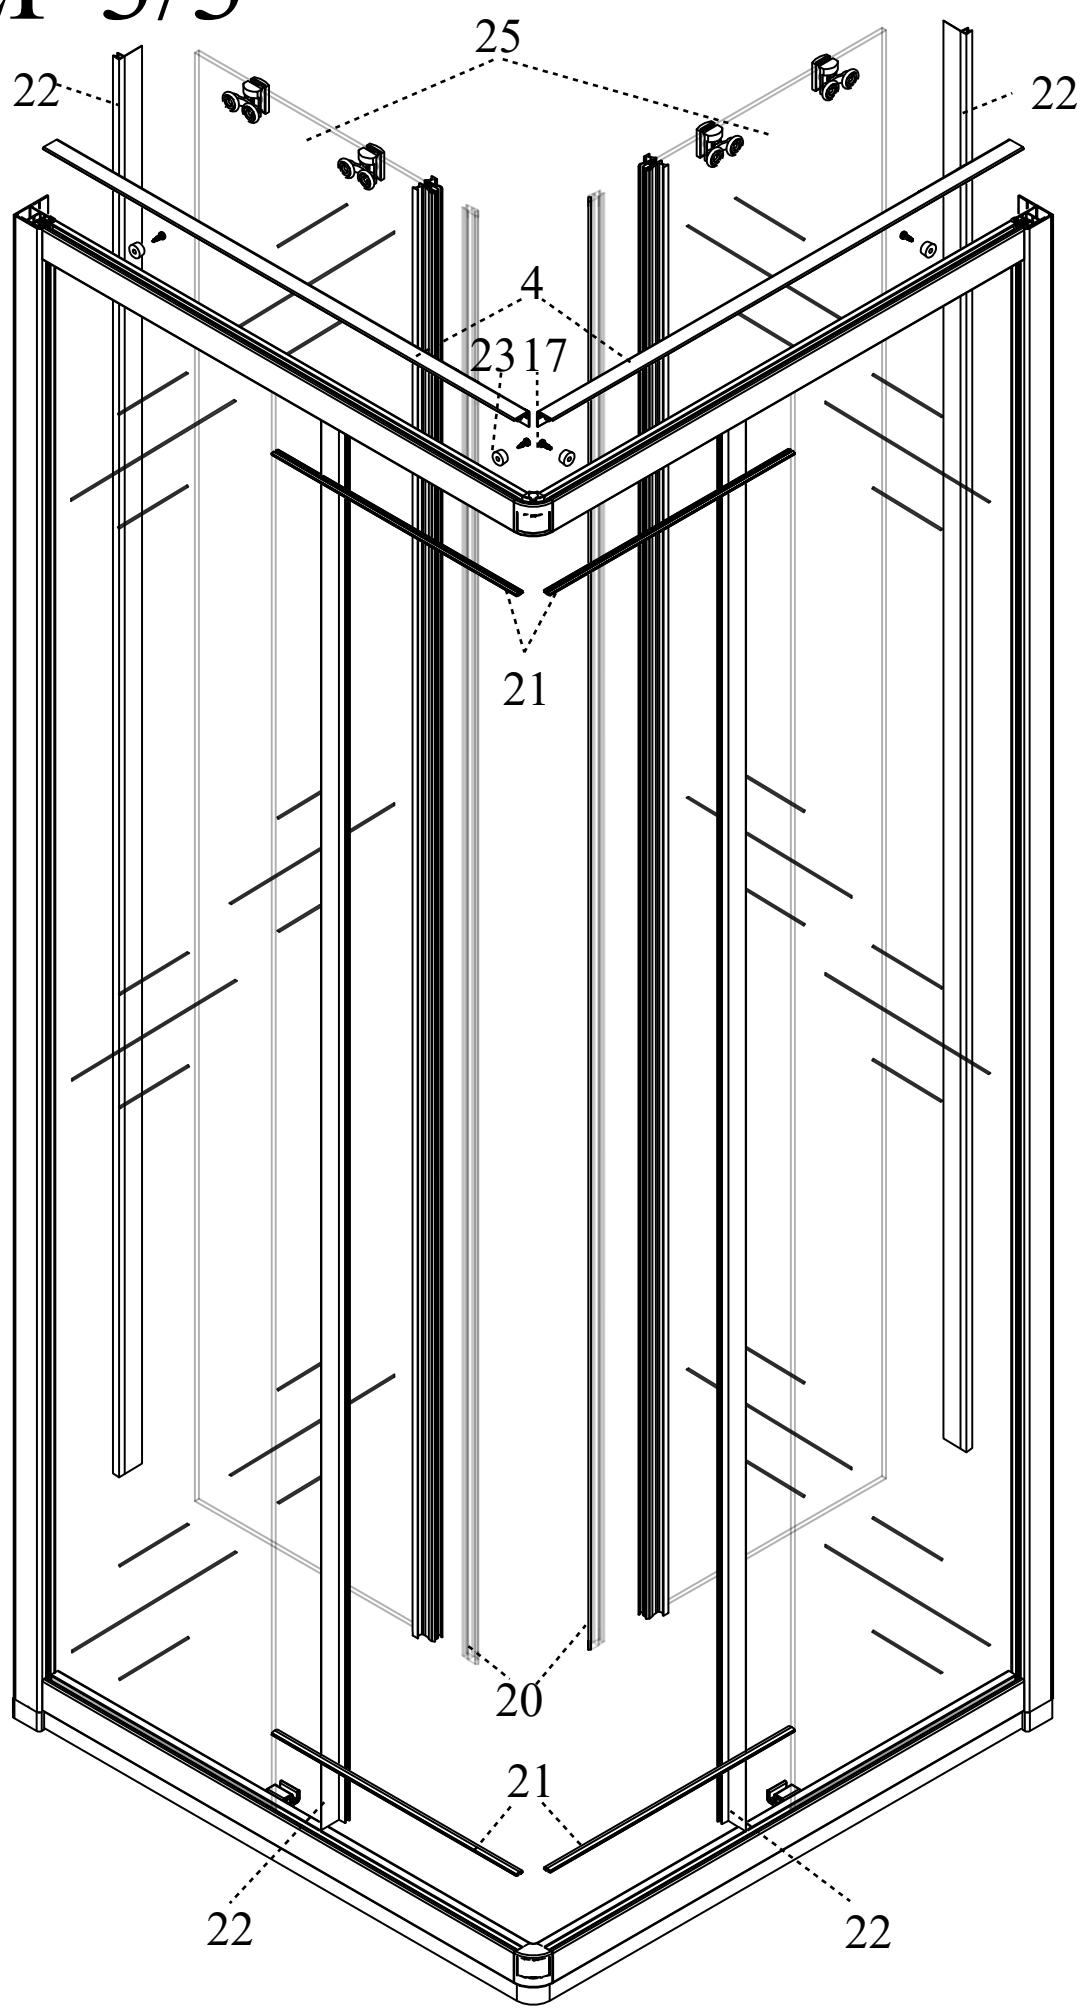


3.1

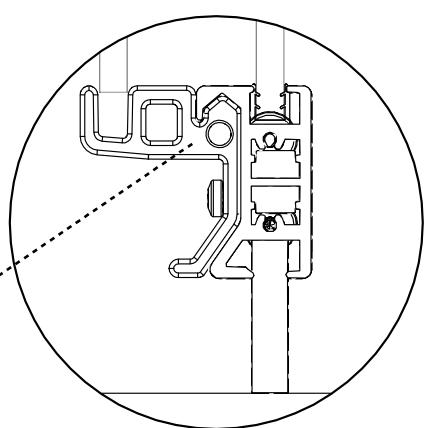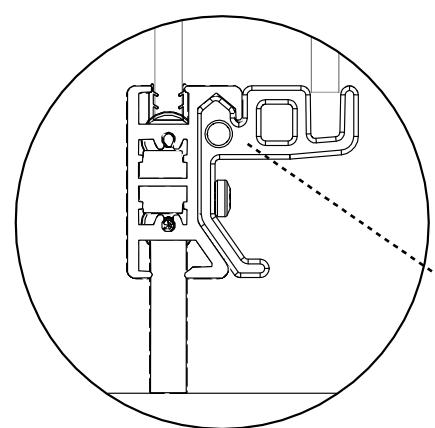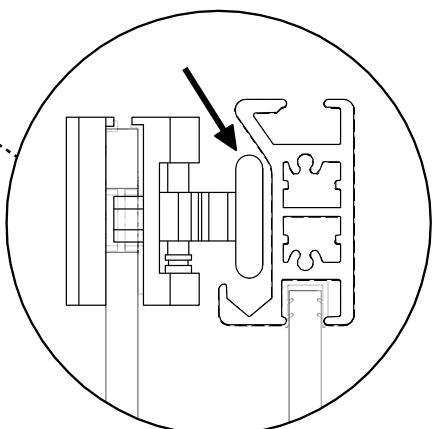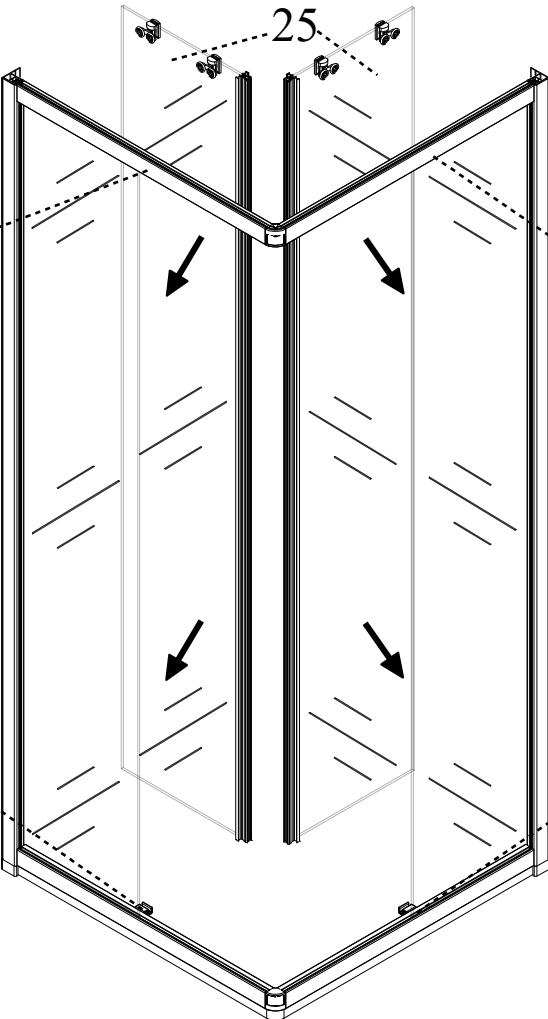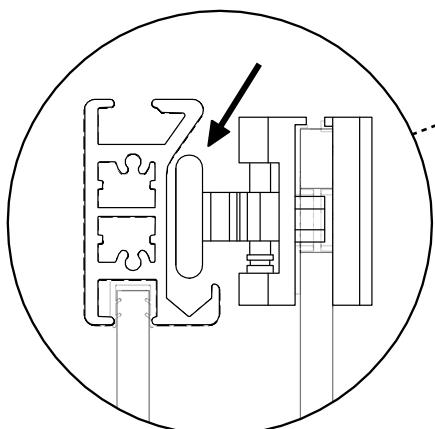




3.2

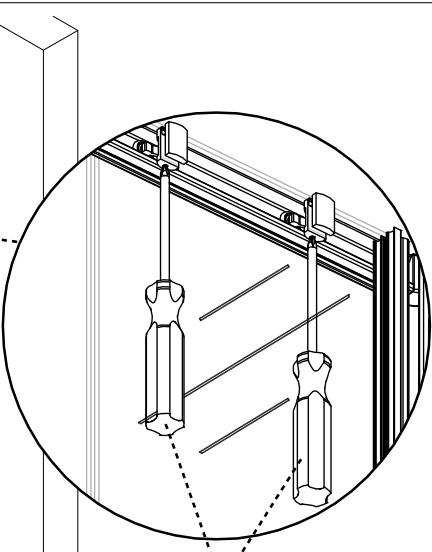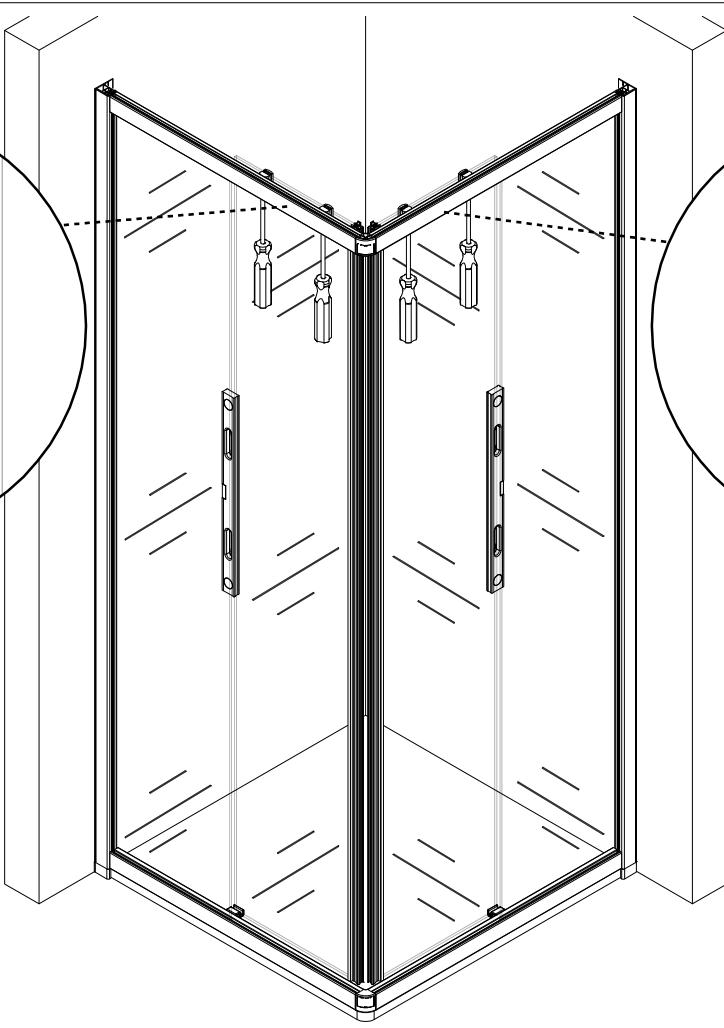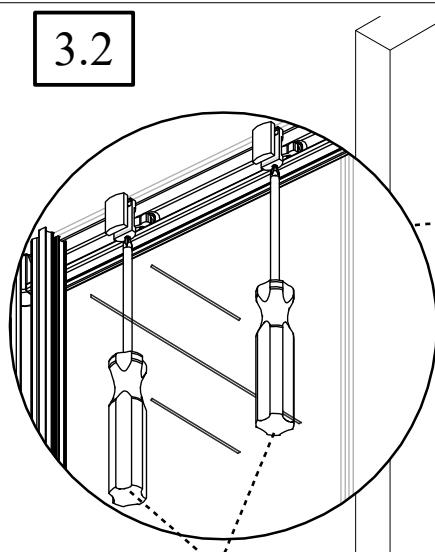


3.3

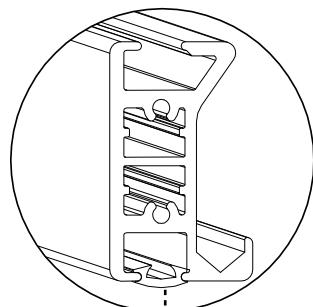


21

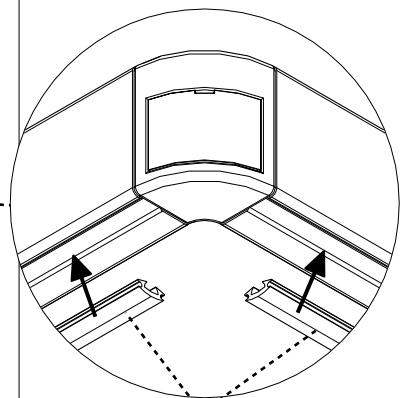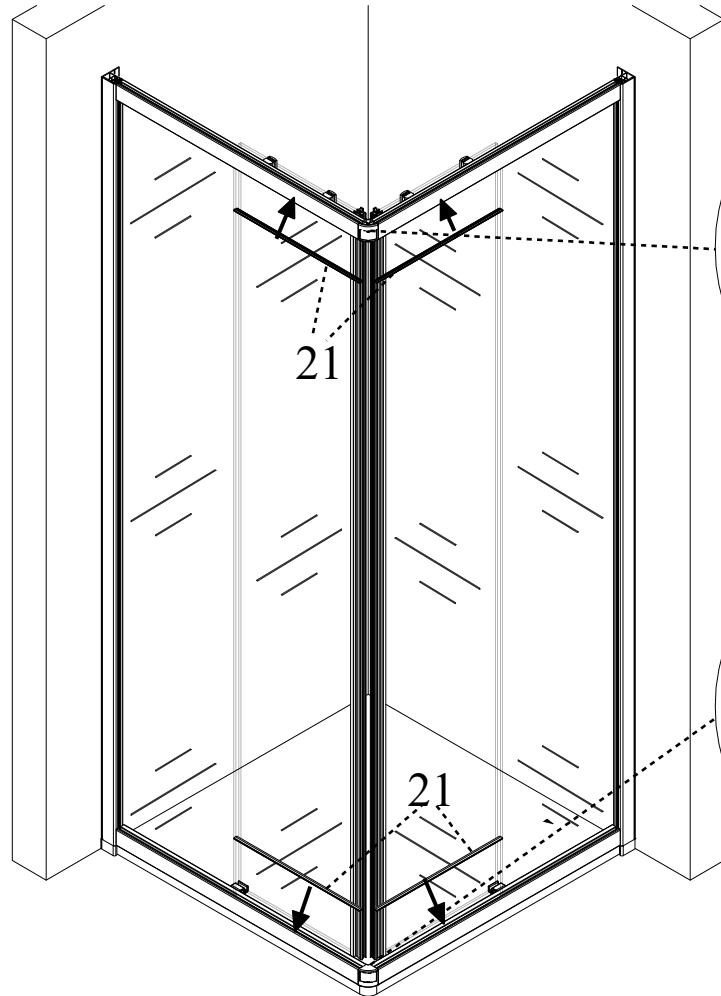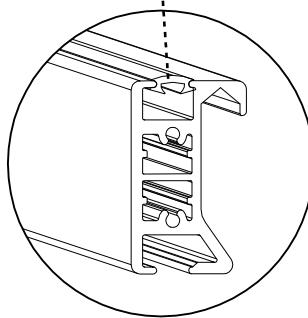


21

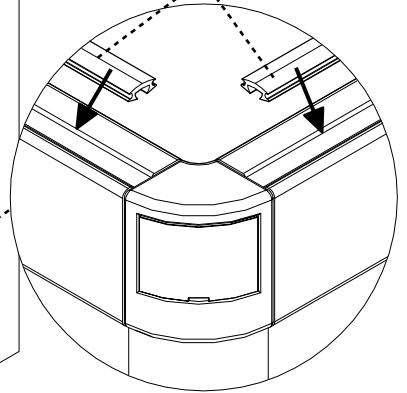

3.4

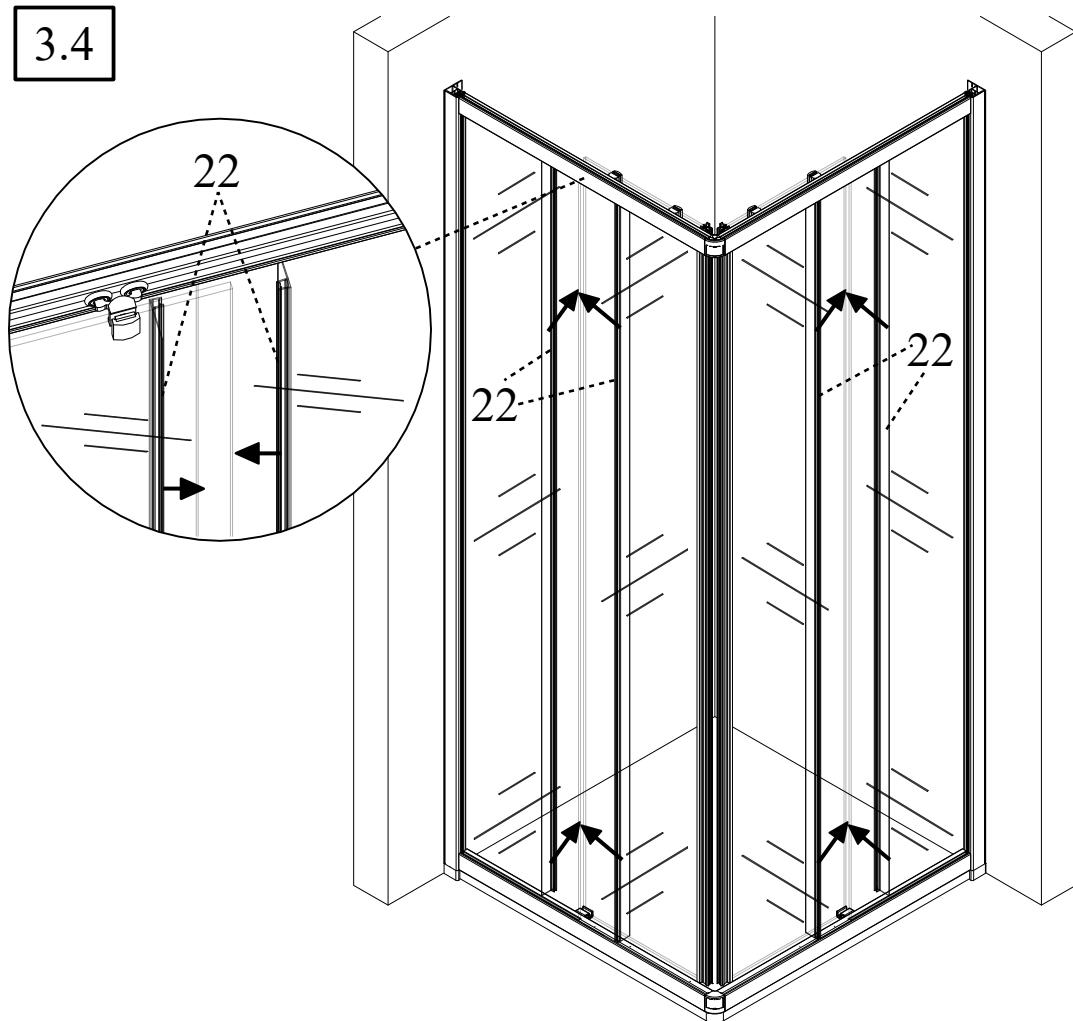



22

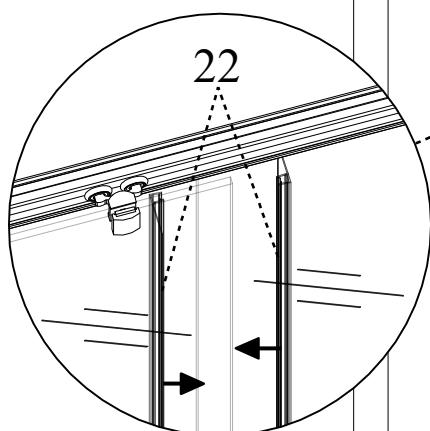


22

22


3.5

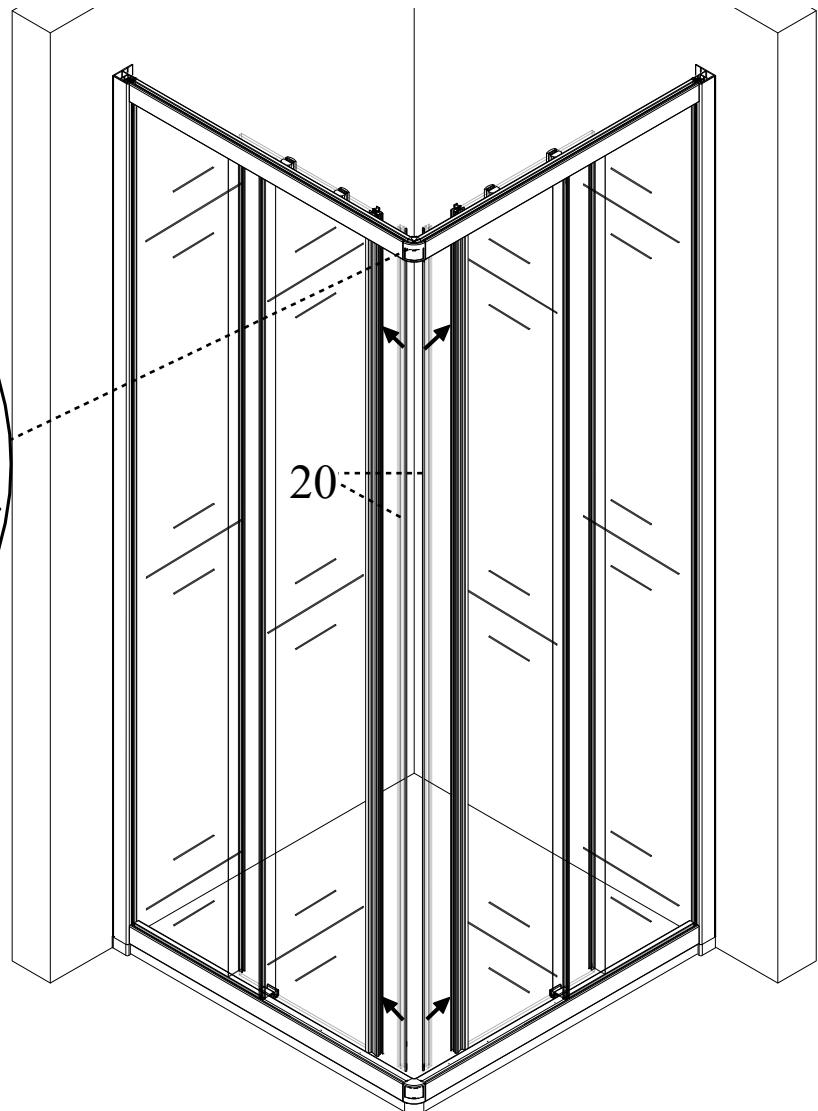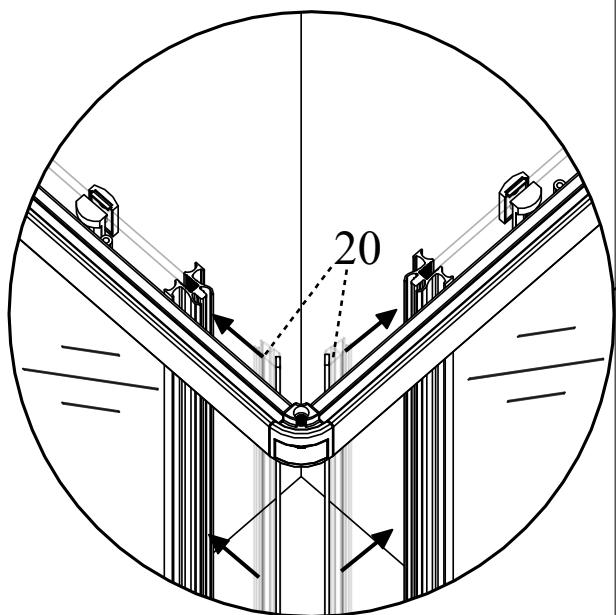


3.6

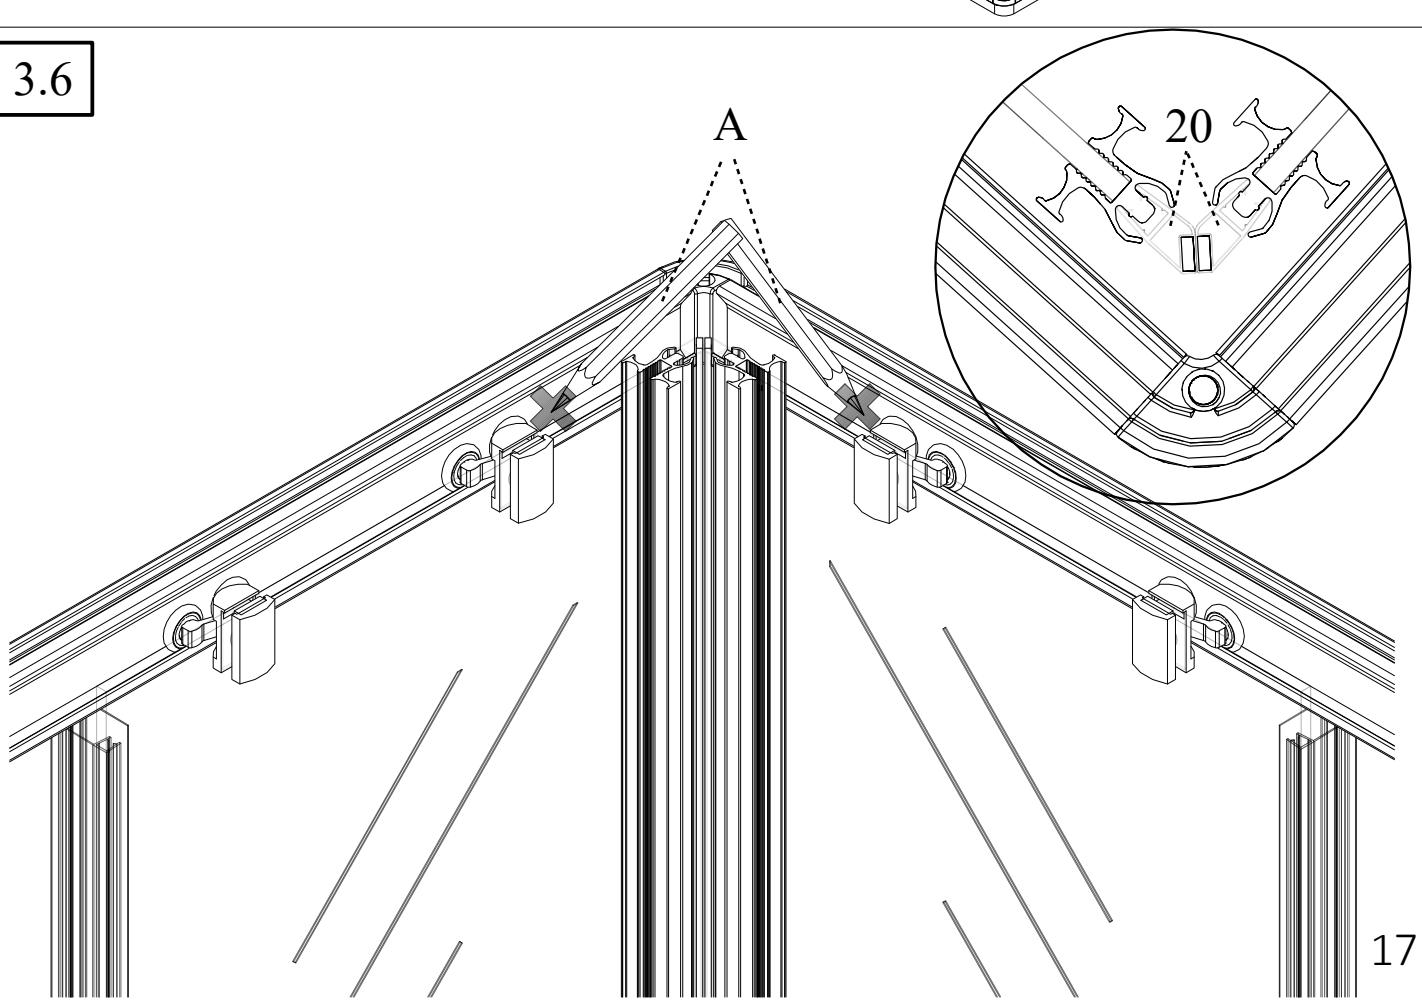



3.7

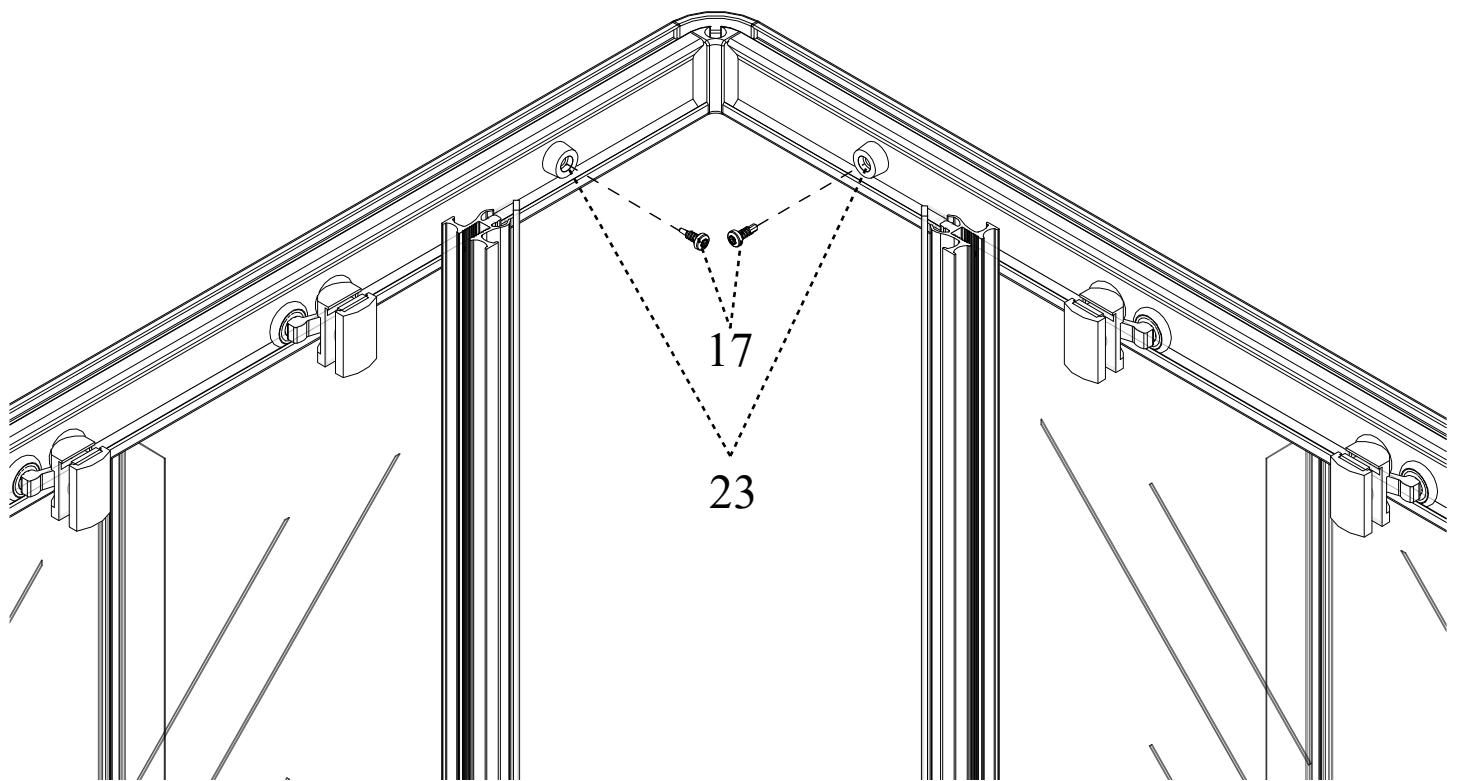

3.8

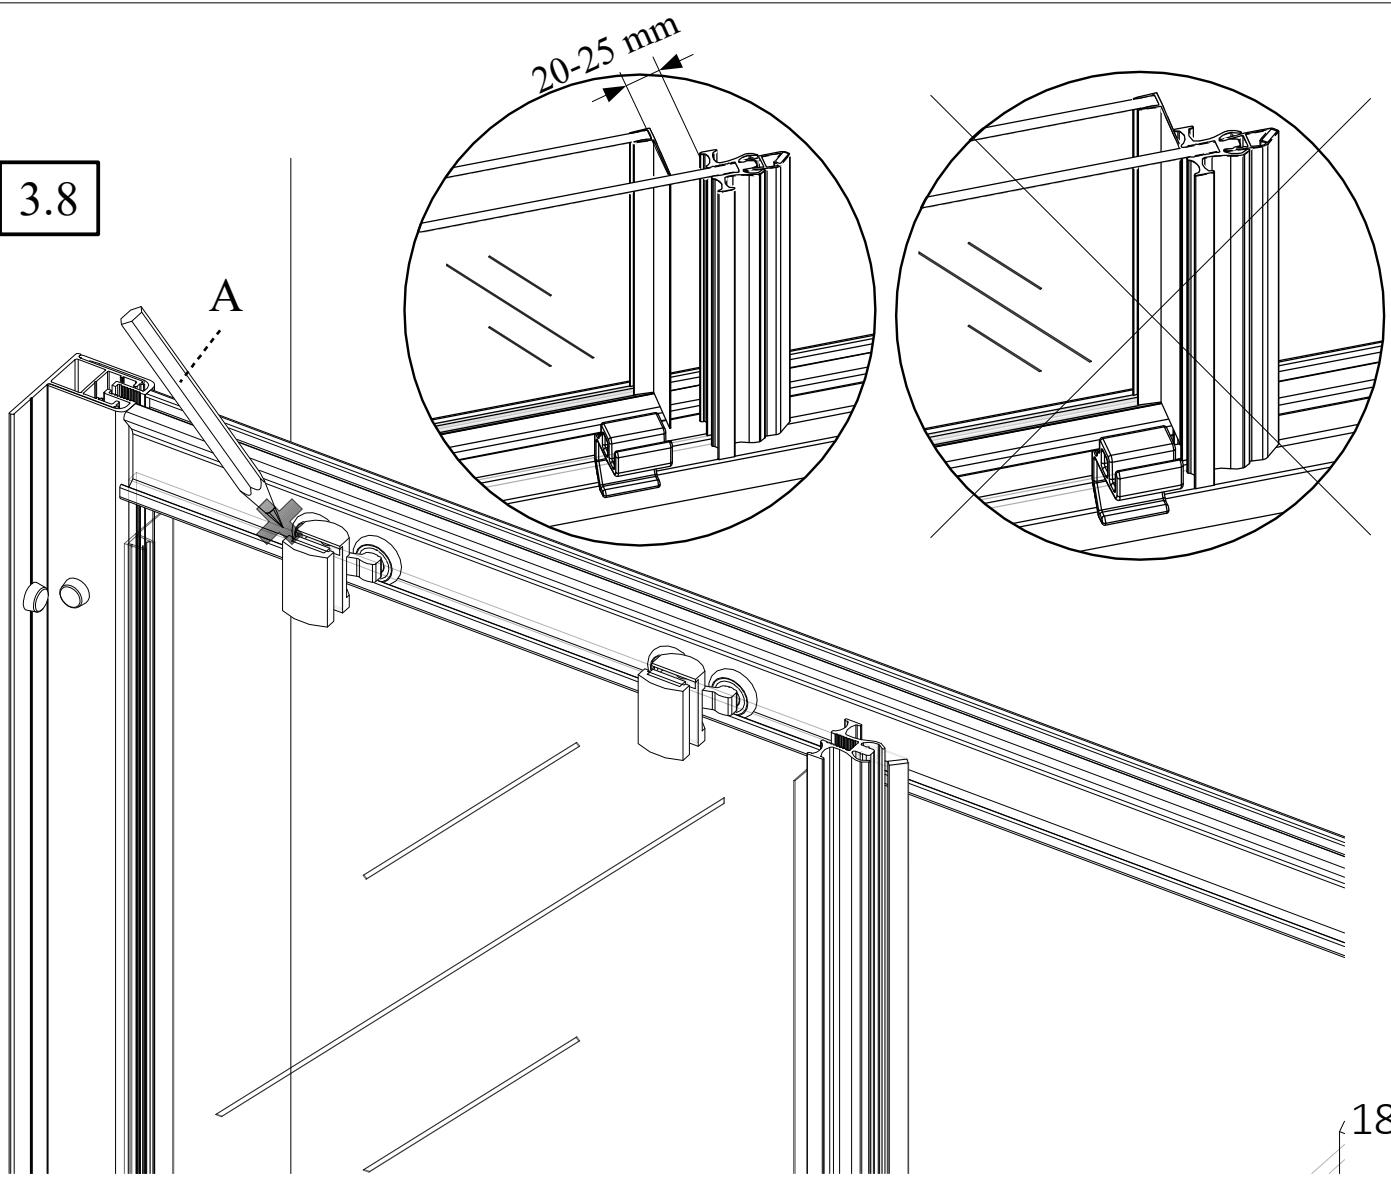

3.9

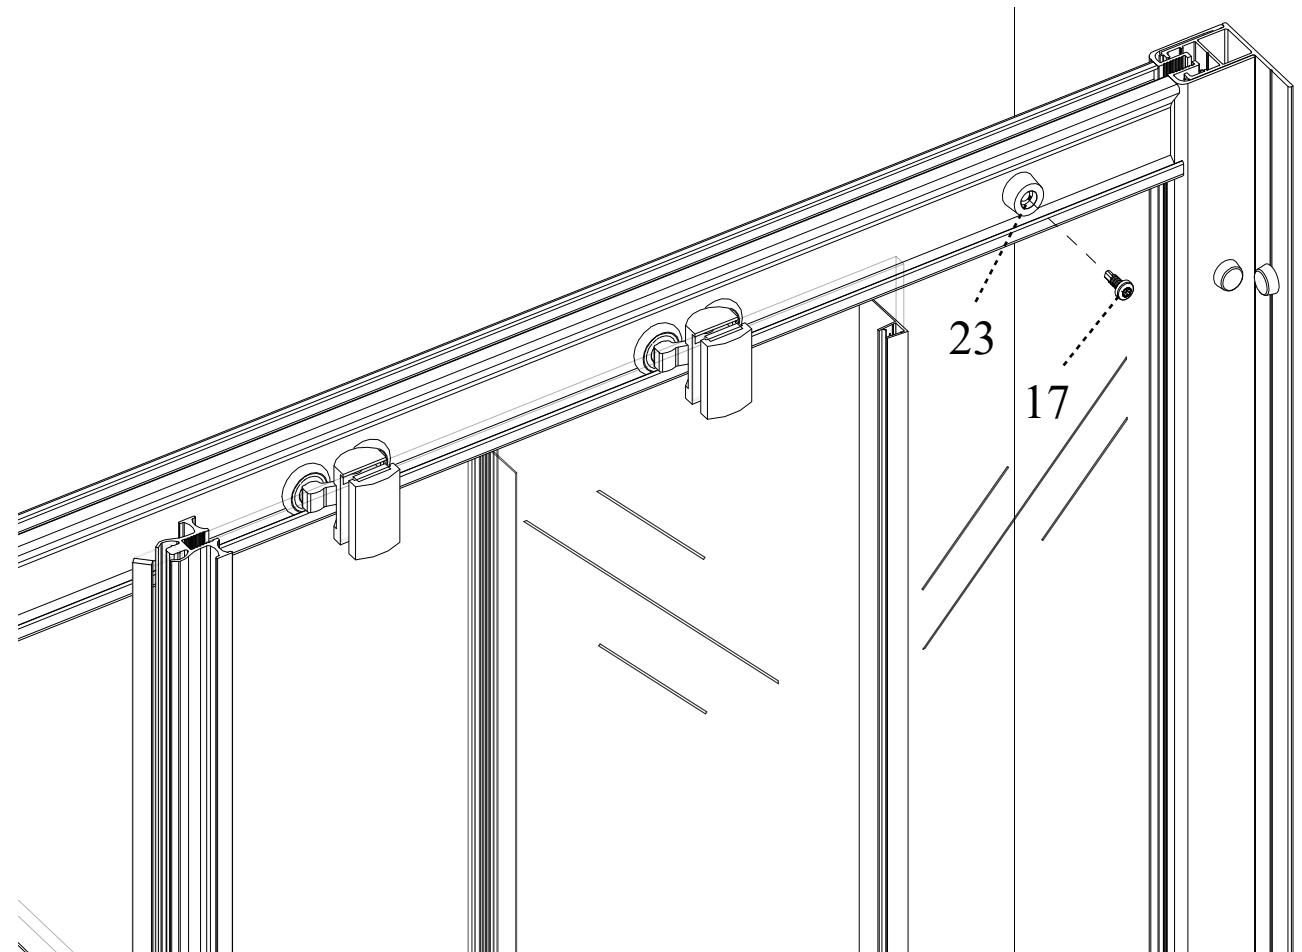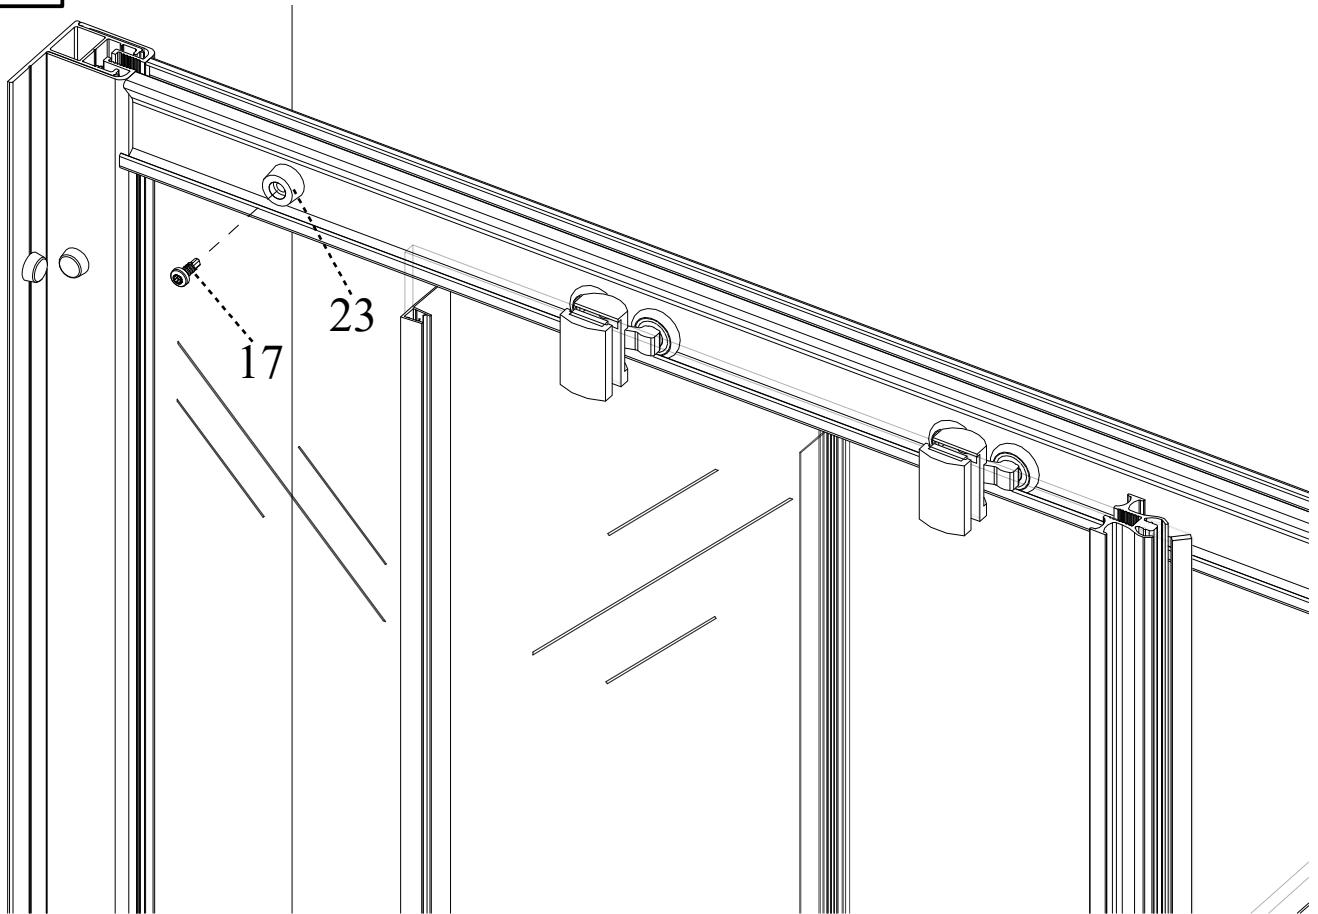

3.10

