







HIE TAKARI®




8/25 6DRLM

# 704/705/706

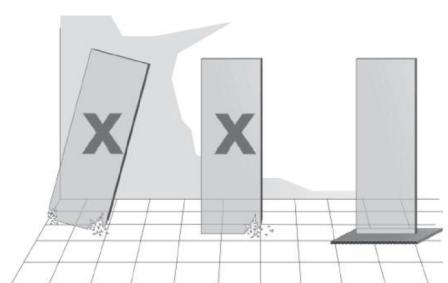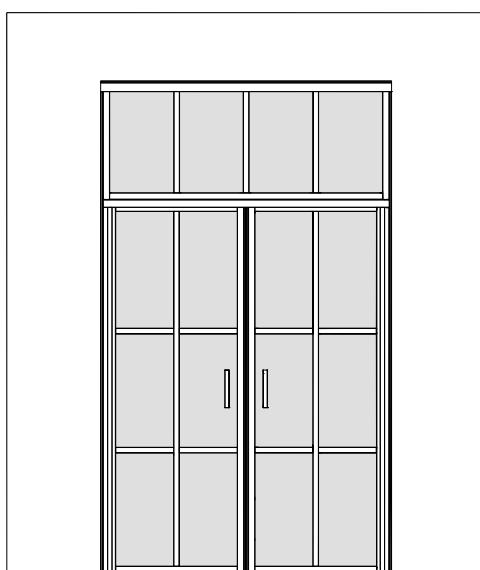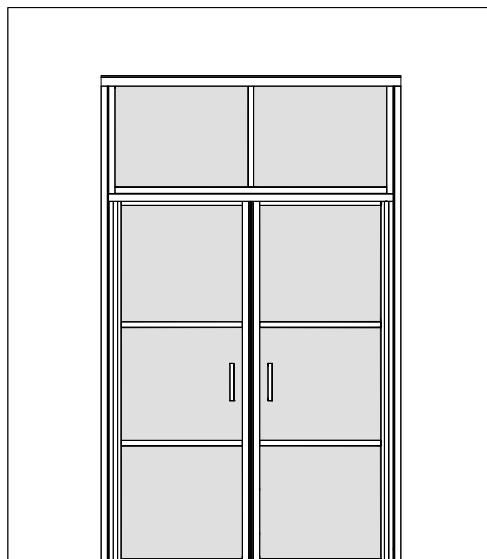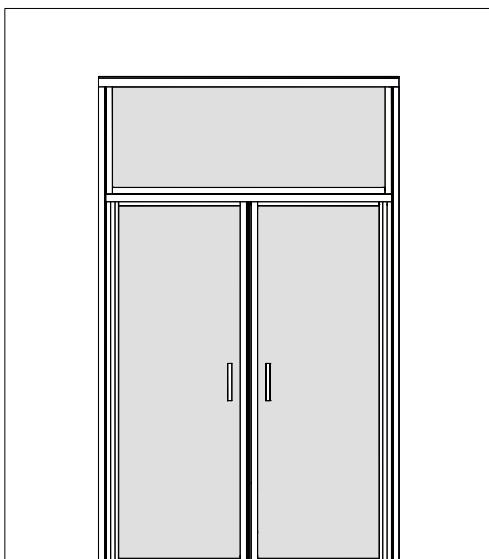

# Parts

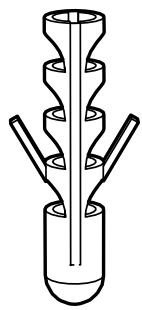


4/83 13RLM



4/83 11RLM



4/83 24RLM



4/83 23RLM

1. 6x30 mm  
x20


2. 4.5x45 mm  
x20

3. 4.2x13 mm  
x22


4. x22




1/42 T2RLM

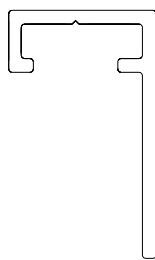


6. x2

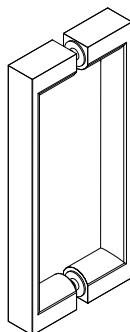



8/65 459LM

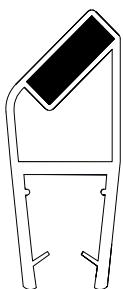

8. x2

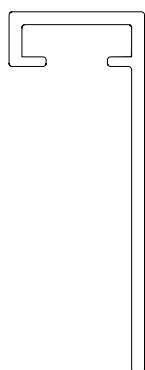

9. x2

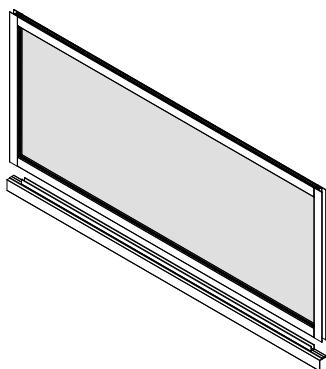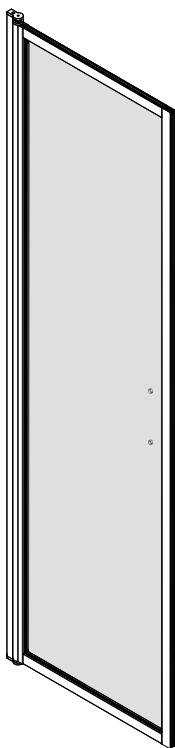


11. x1




12. x2

10. x2


# Tools

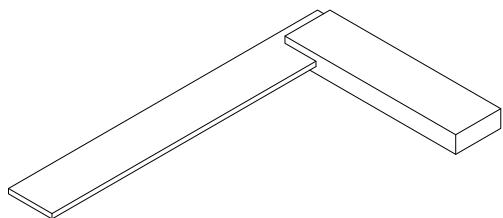

A

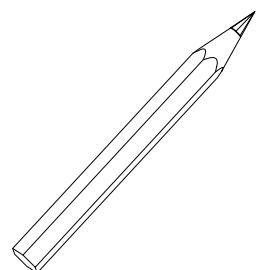


B




C – Glue  
D – Silicone




E

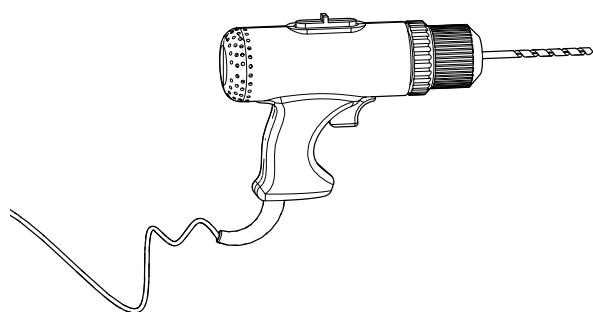


$\varnothing 6\text{ mm}$   
F

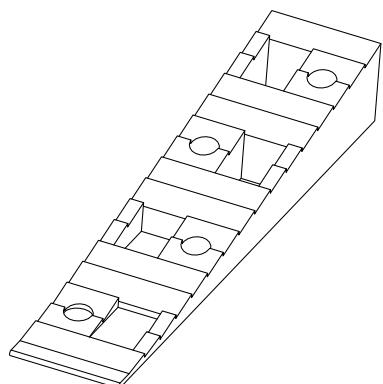

G

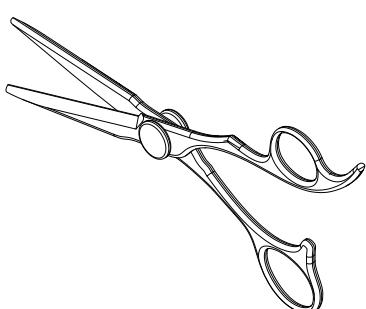


H

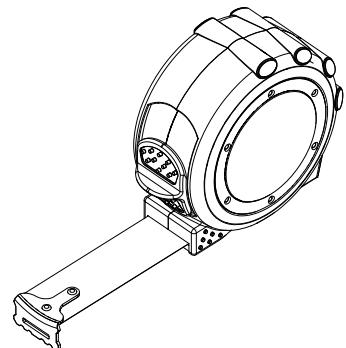


I

1/2


x2

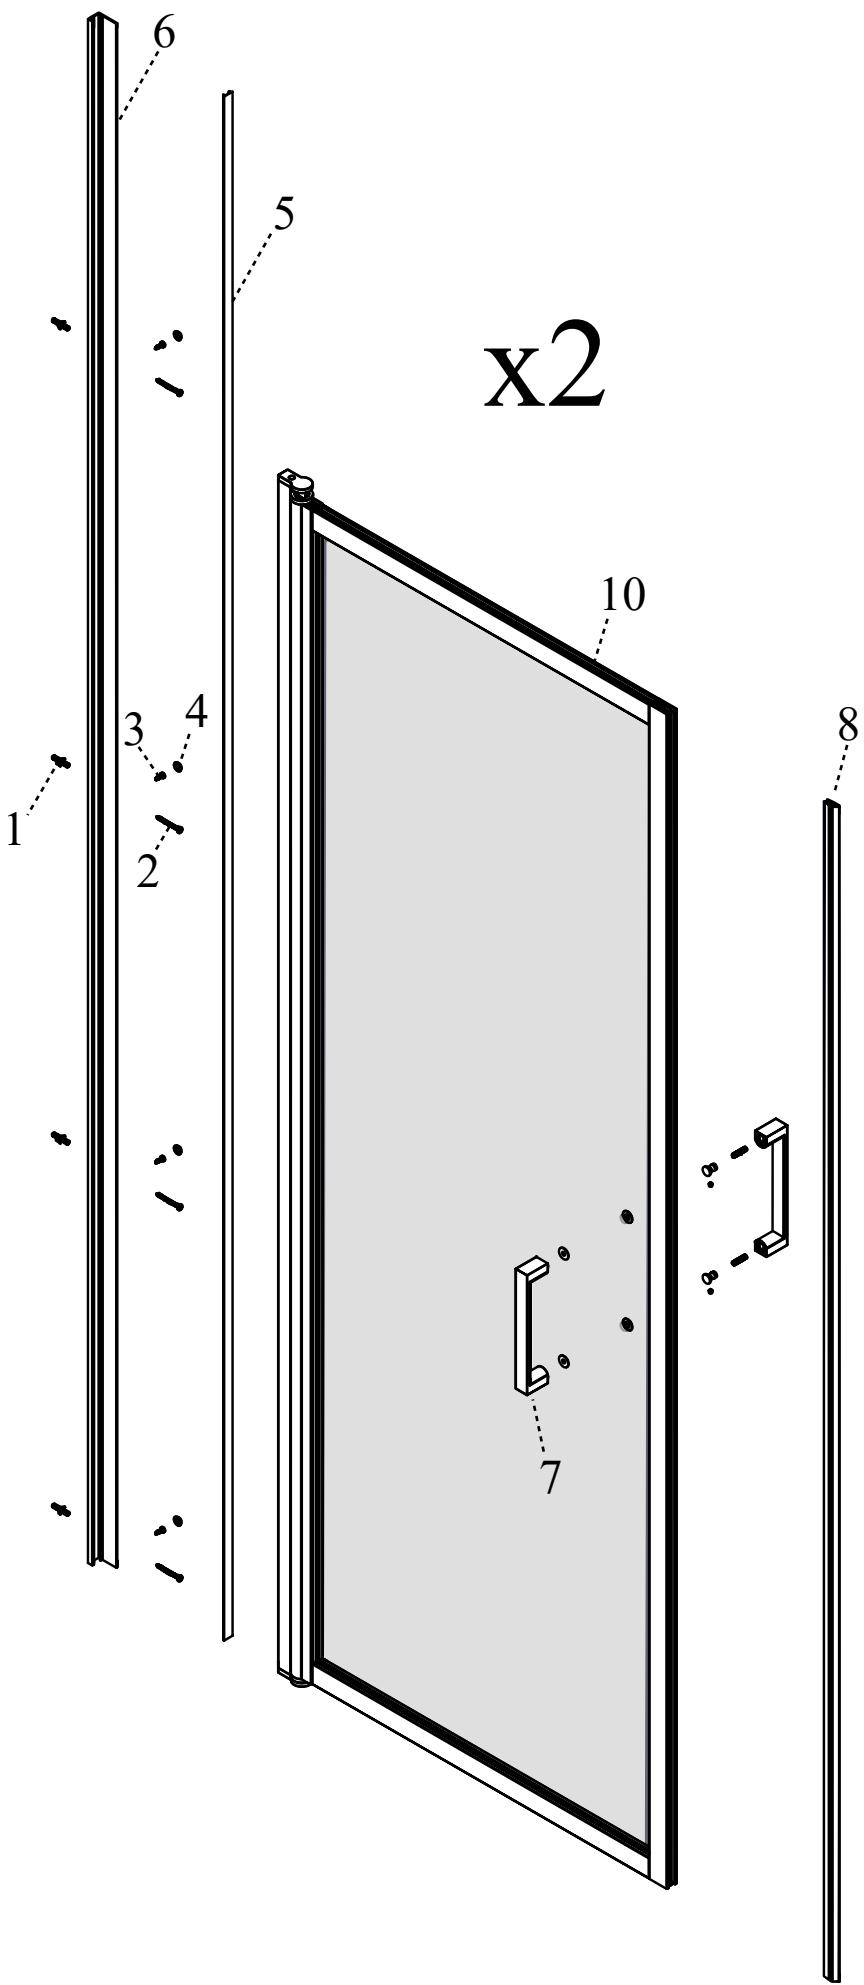


1.1

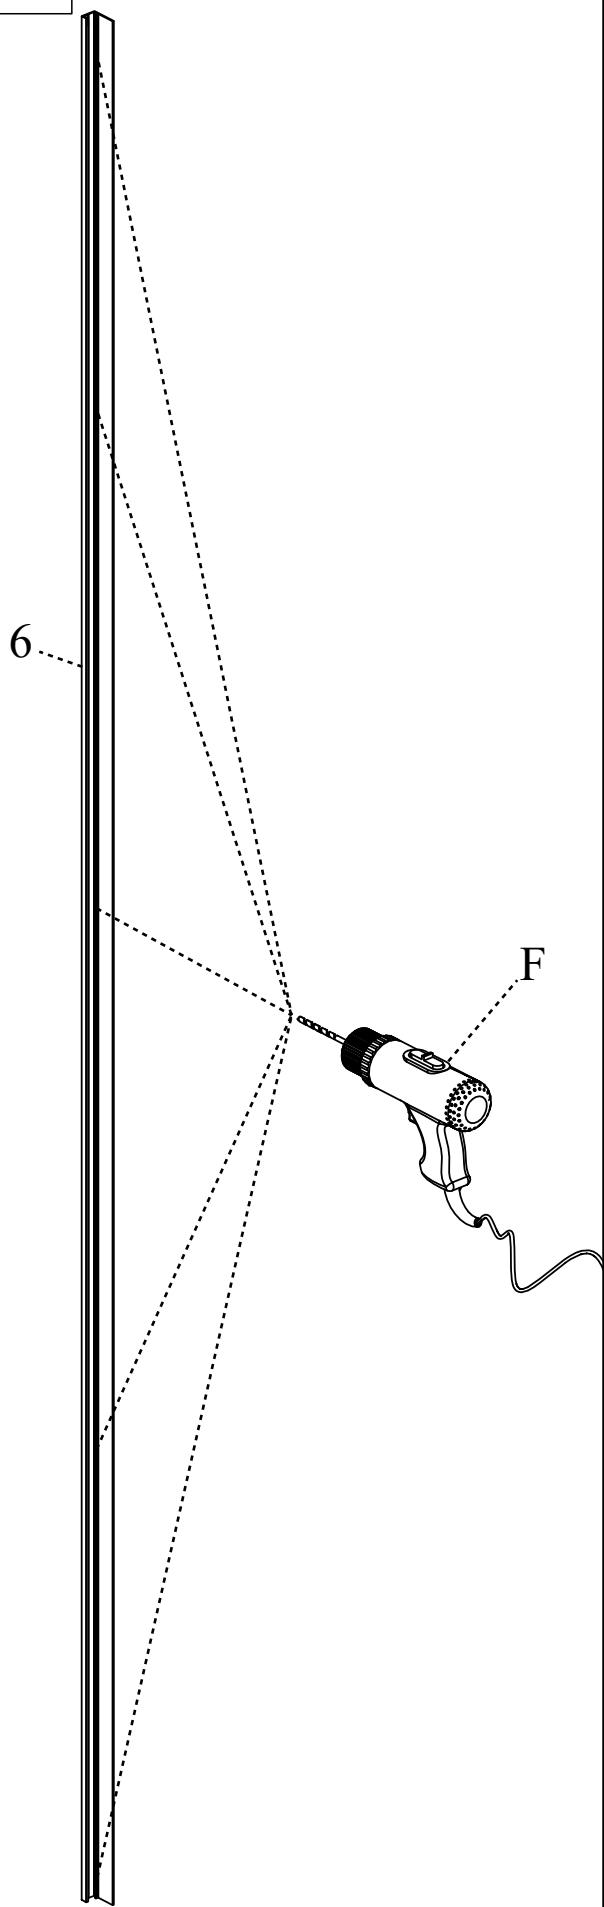


1.2

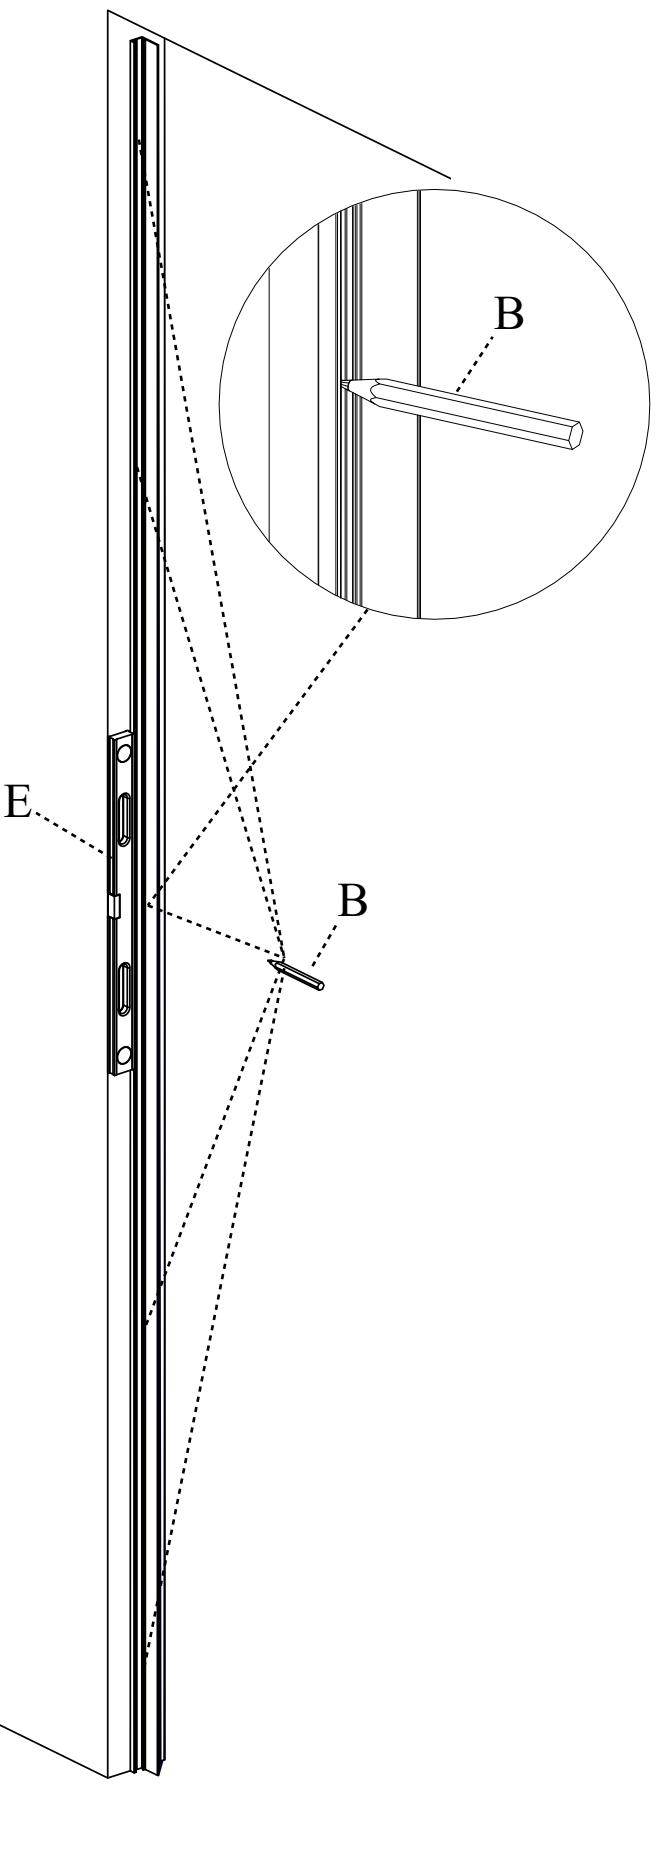


1.3

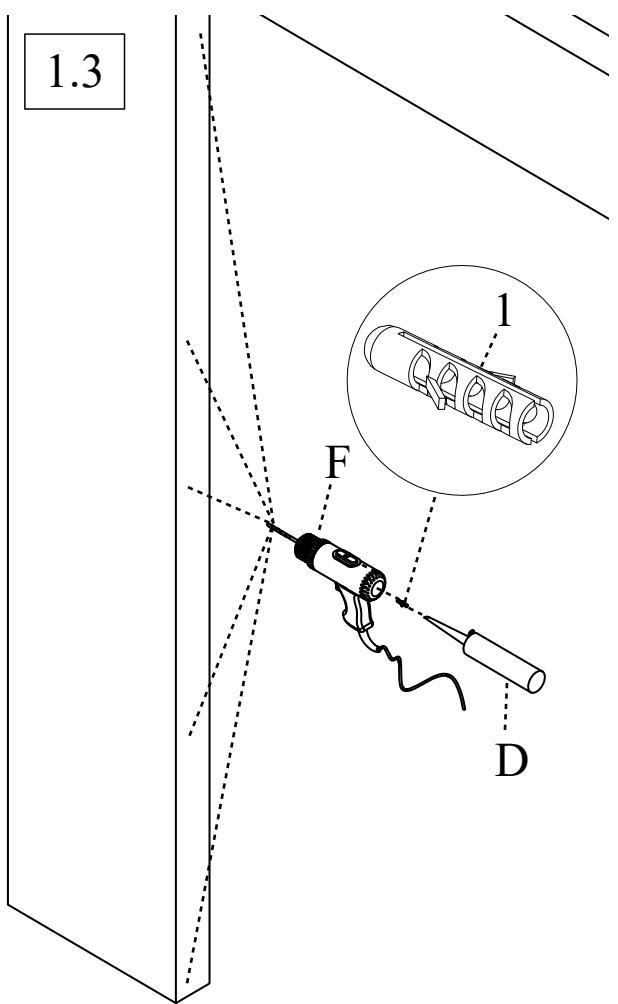


1.4

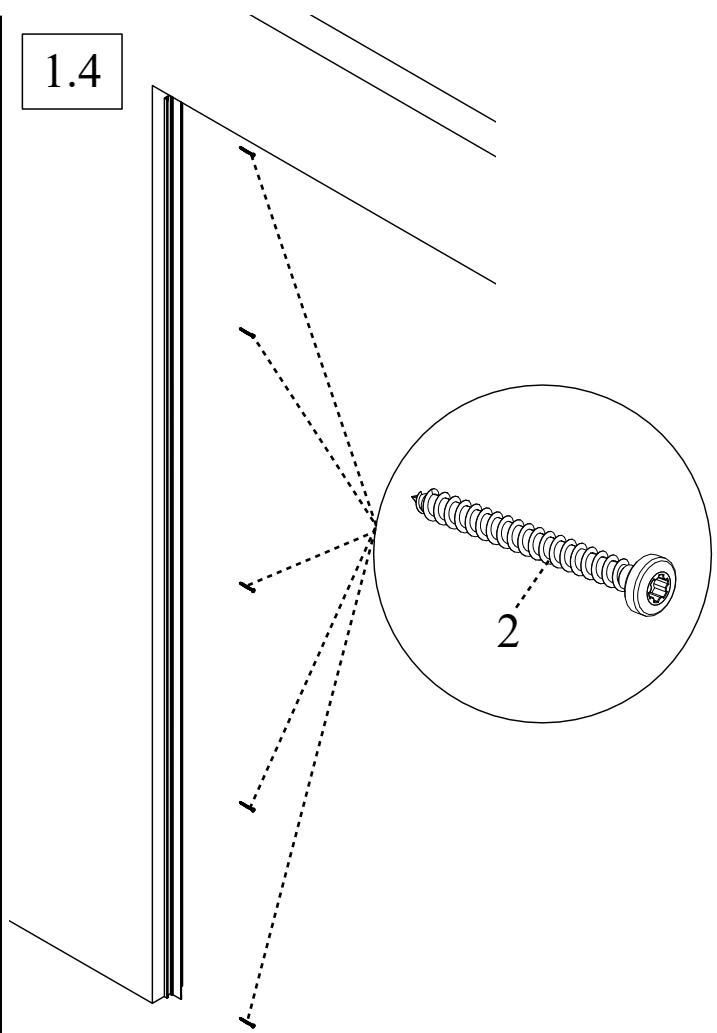


1.5

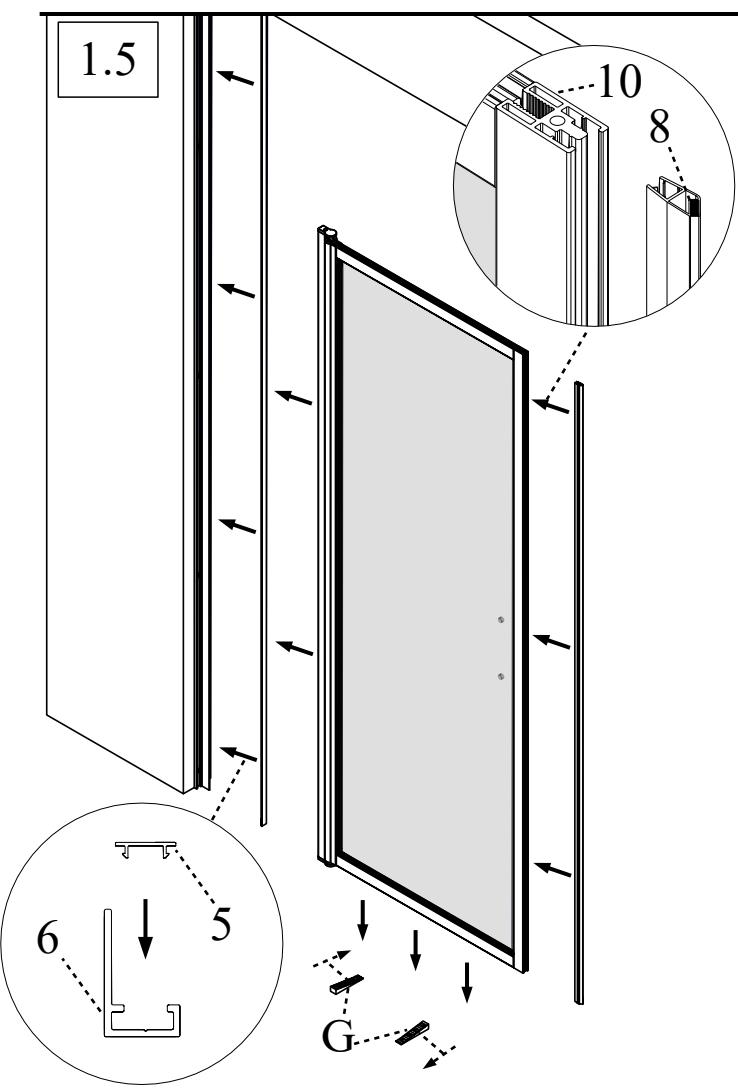


1.6

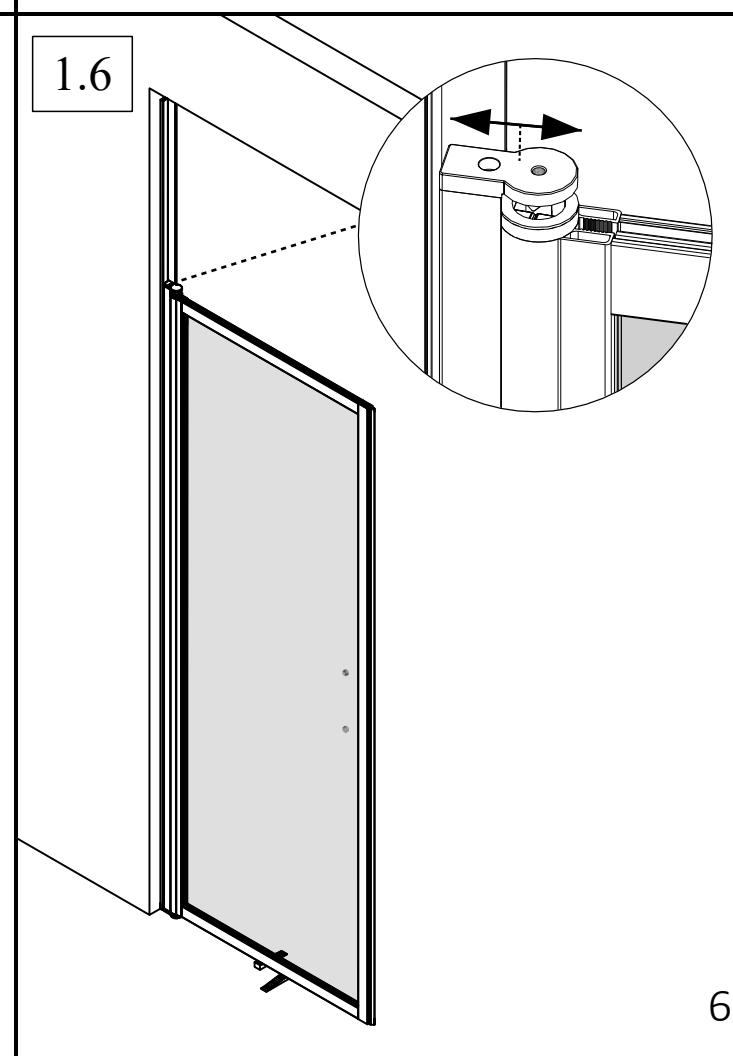

1.7

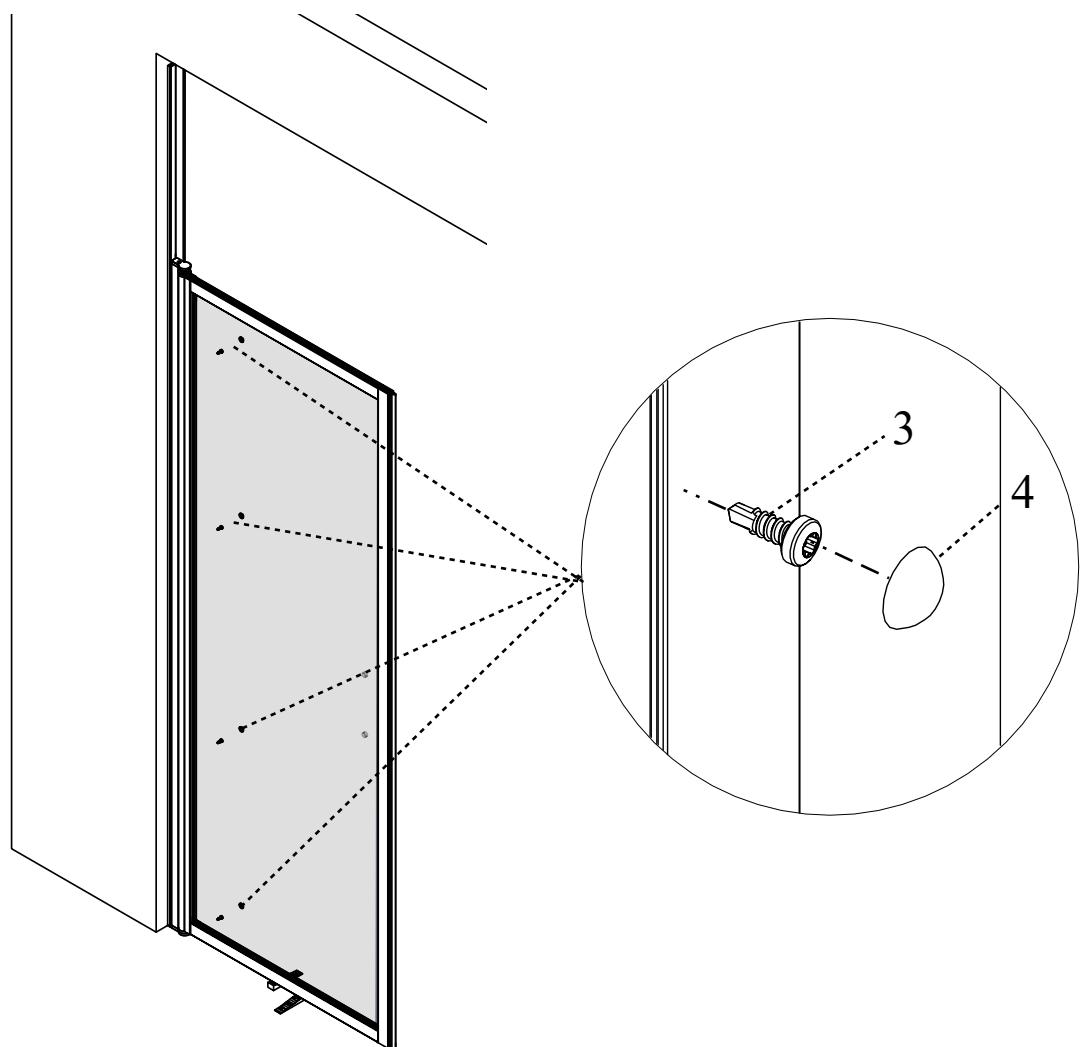


1.8

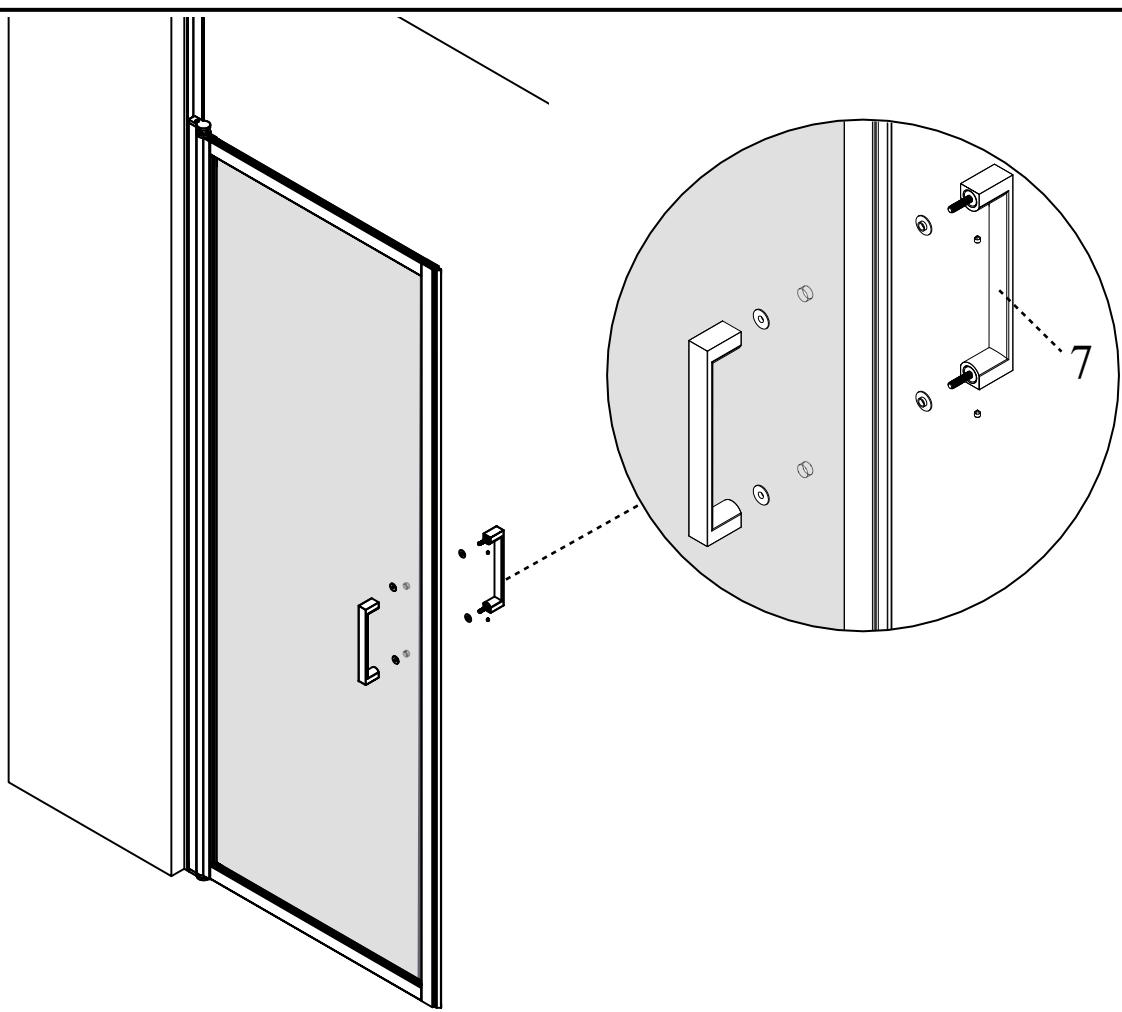


2/2


A)

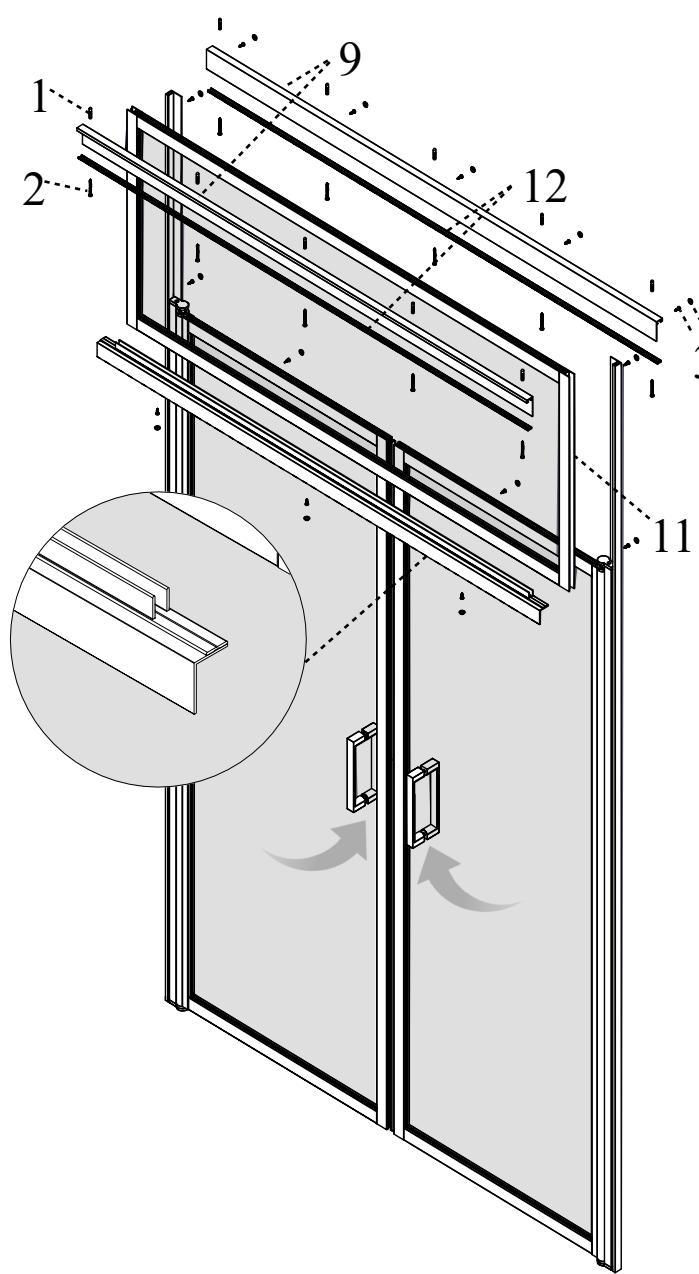


B)

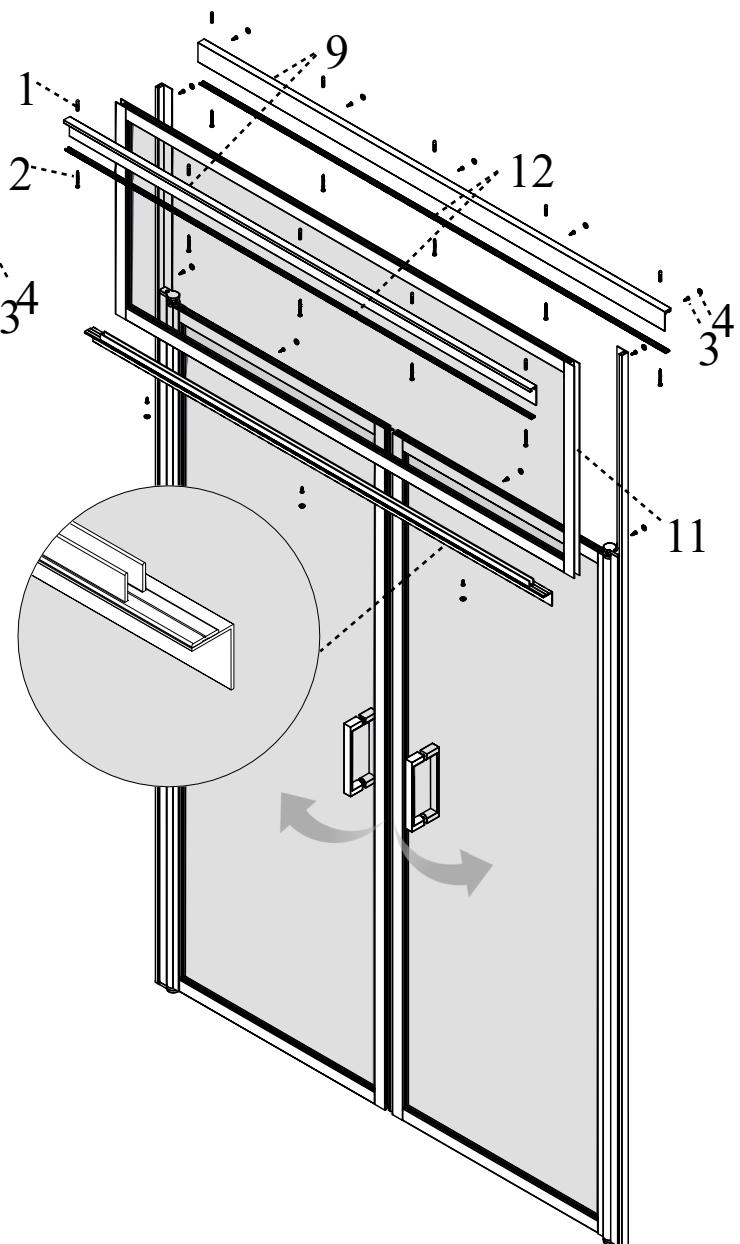


2.1

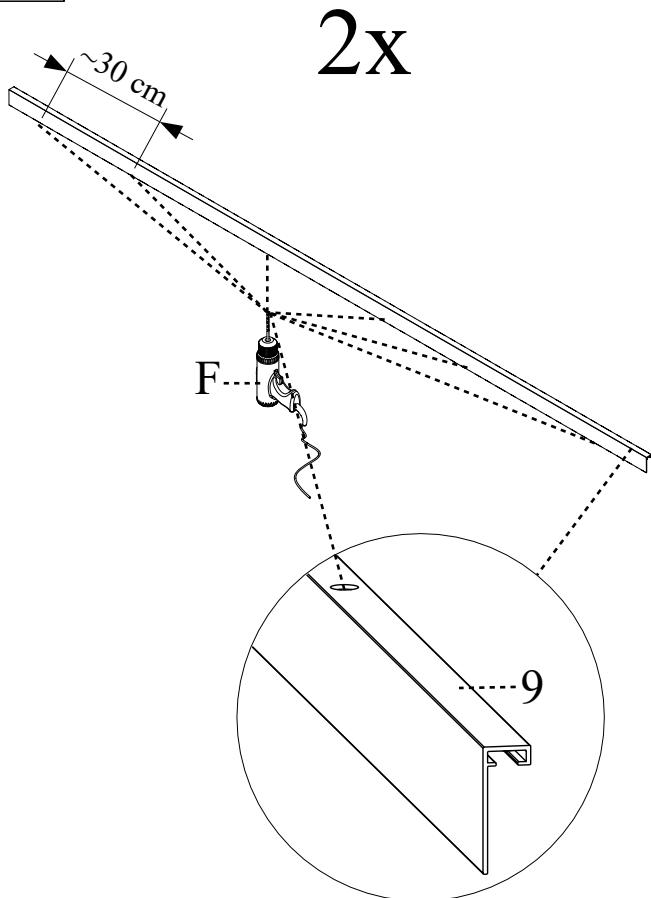


2.2

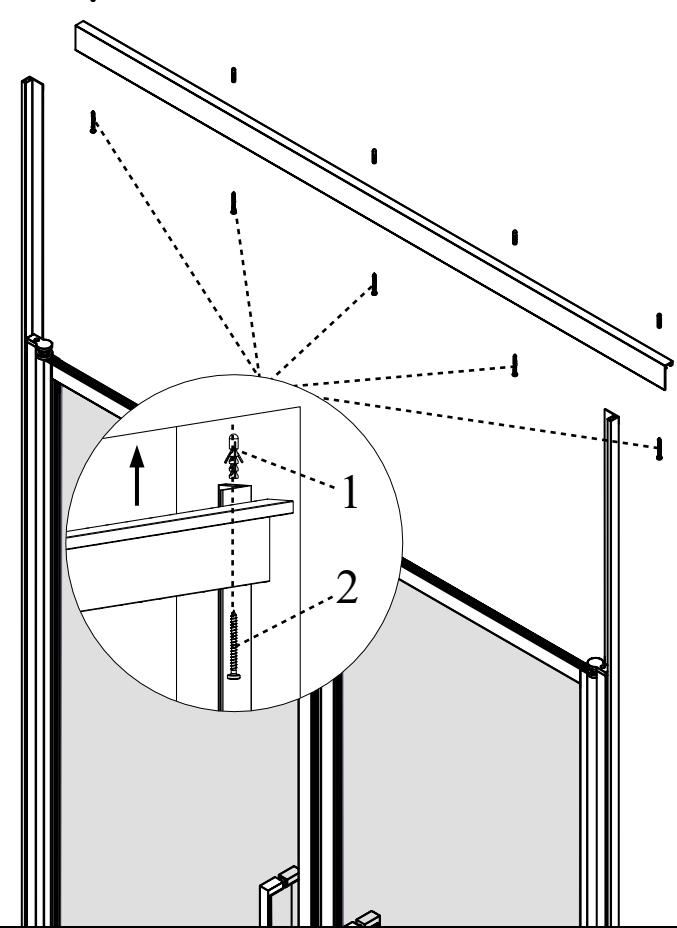


2.3

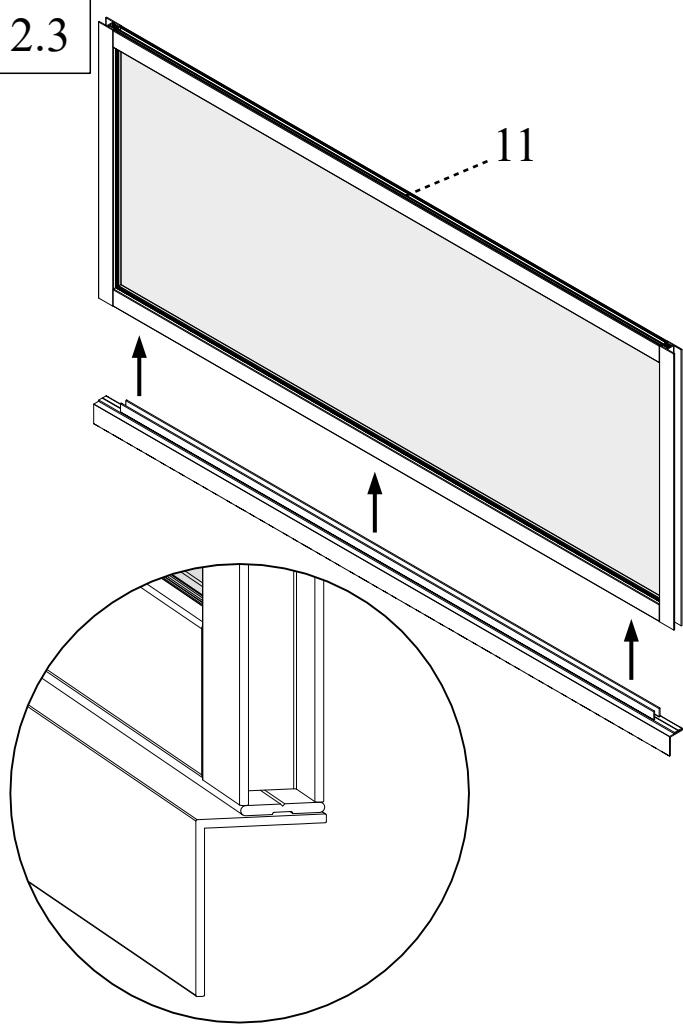


2.4

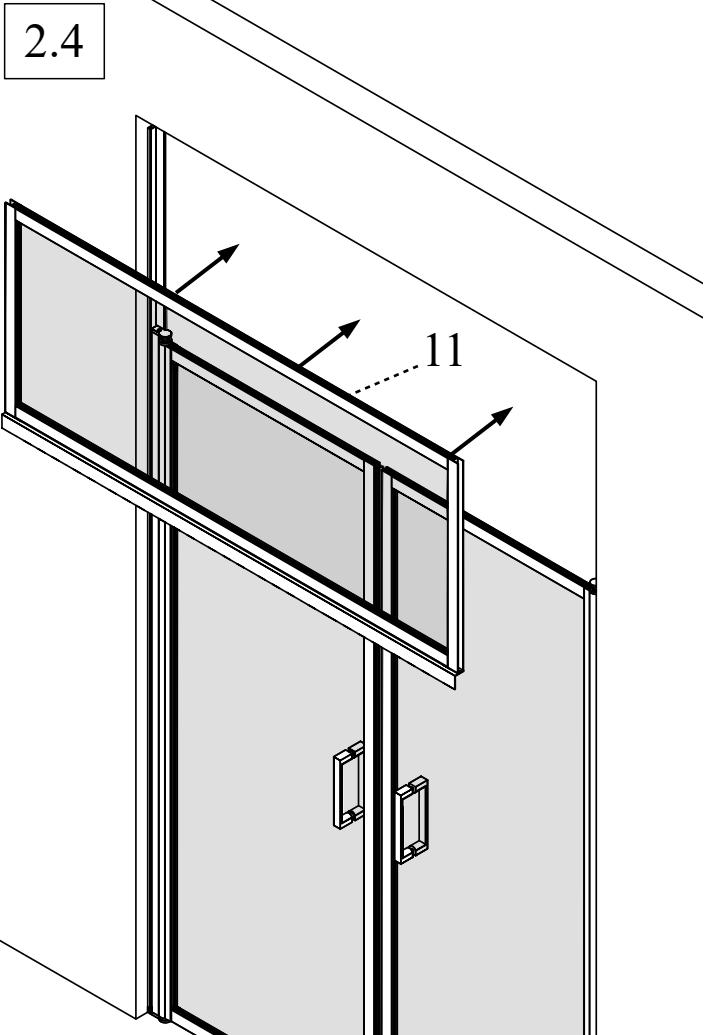




2.5

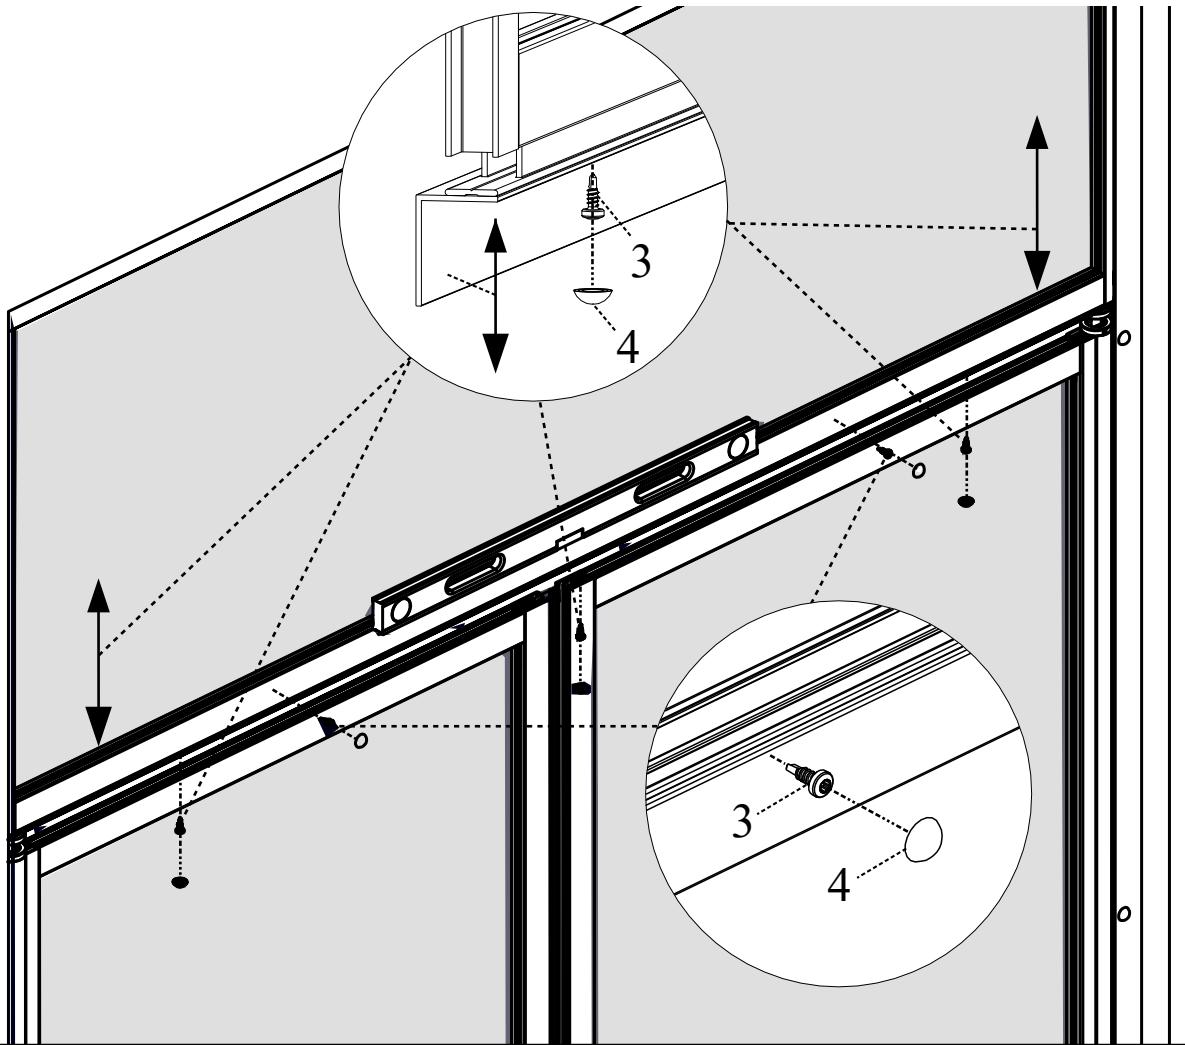


2.6

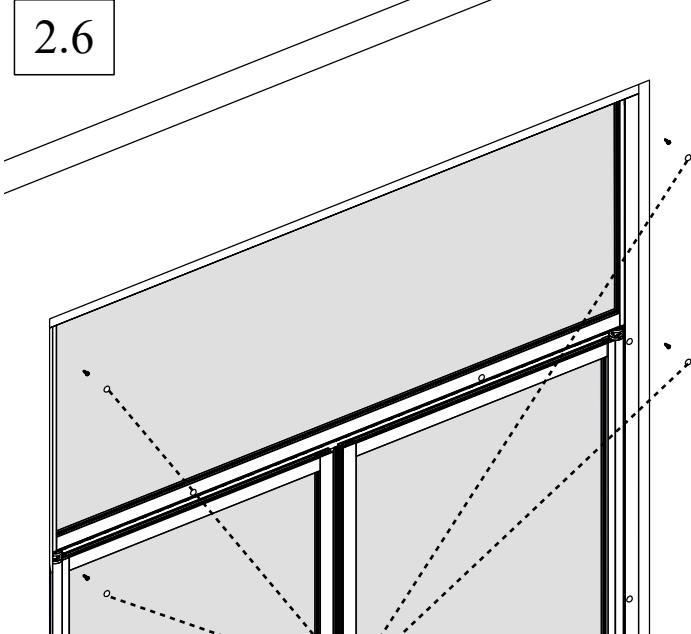

2.7

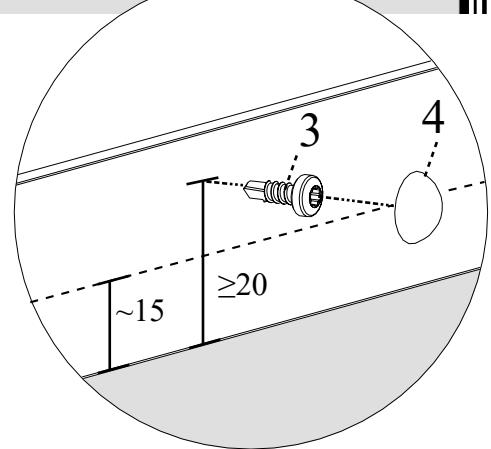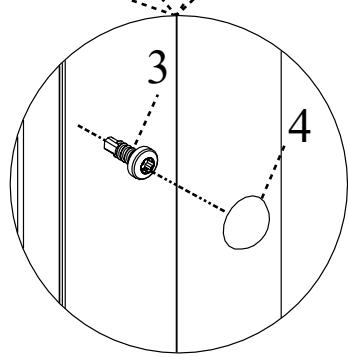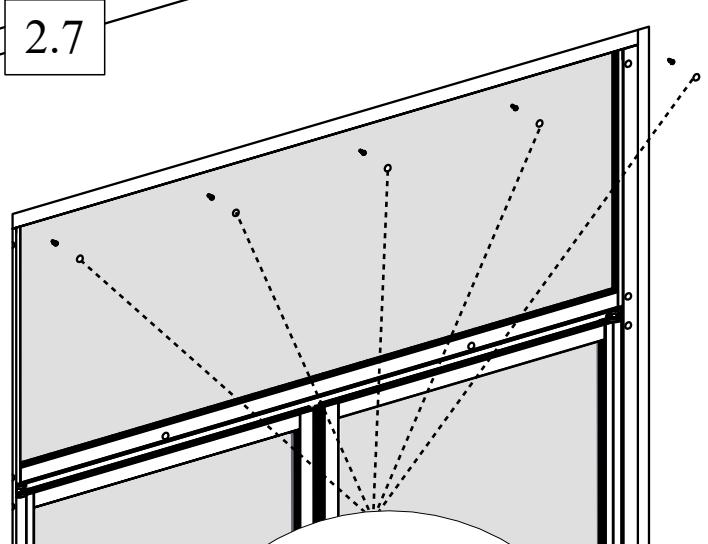

2.8

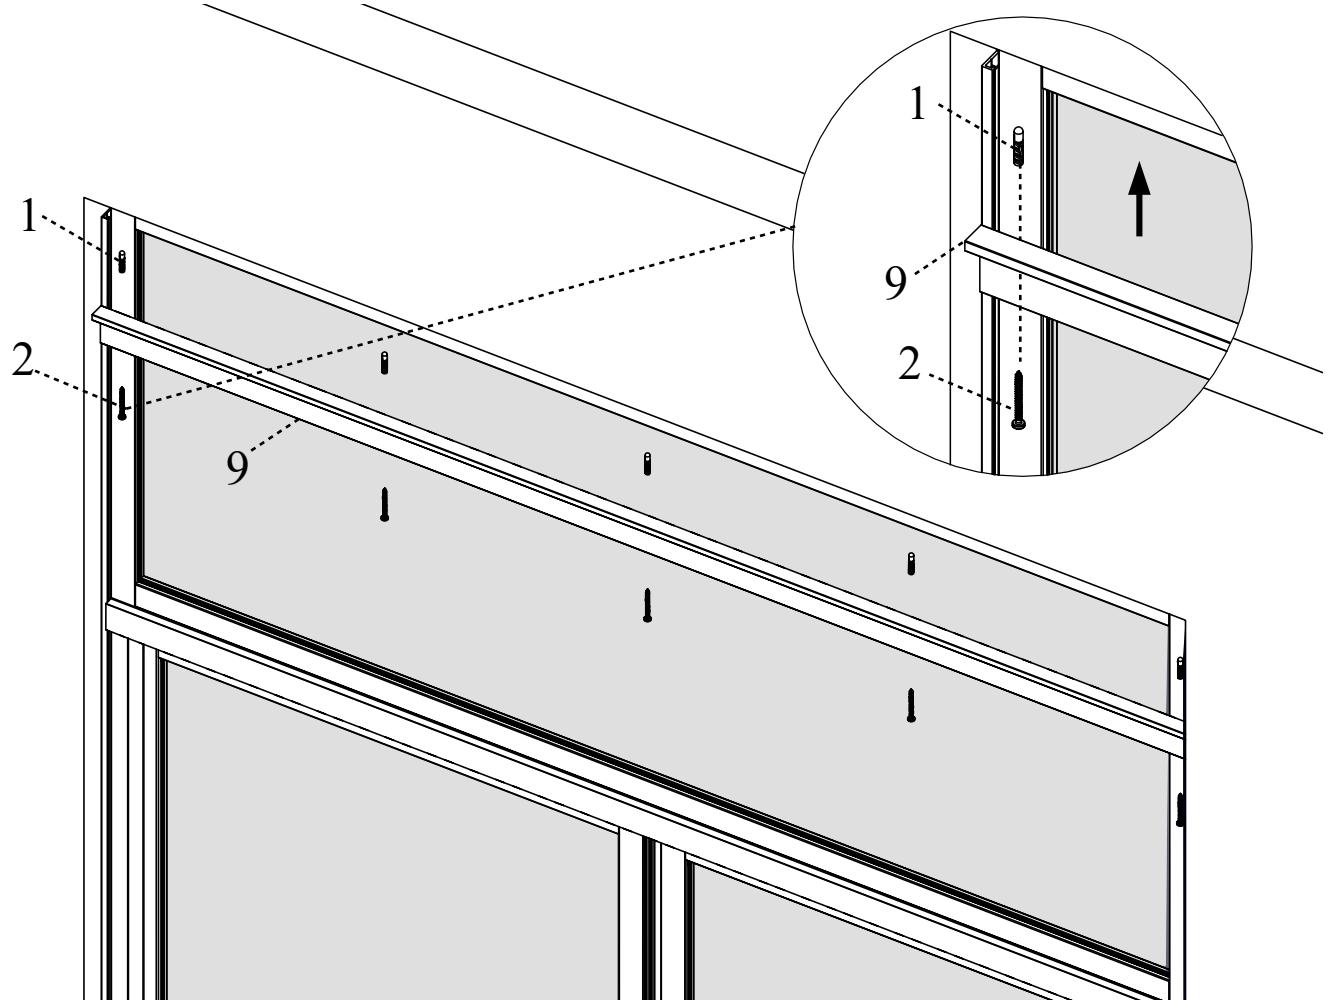

2.9

